

SIEMENS



Gigaset S670-S675


Issued by
Siemens Home and Office Communication Devices GmbH & Co. KG
Schlavenhorst 66
D-46395 Bocholt


© Siemens Home and Office Communication Devices GmbH & Co. KG 2007
All rights reserved. Subject to availability.
Rights of modification reserved.

www.siemens.com/gigaset

Gigaset

Handset at a glance


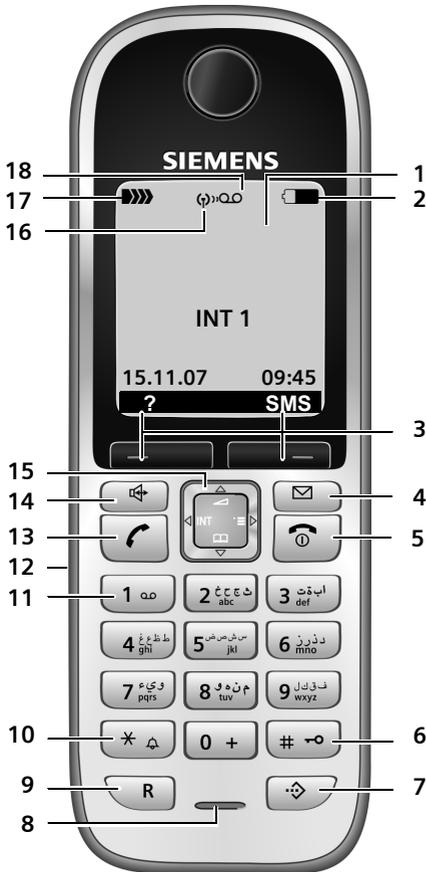


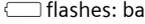- 1 **Display (screen)** in idle status
- 2 **Charge status of the batteries**
 (flat to full)
 flashes: batteries almost flat
 flashes: batteries charging
- 3 **Display keys** (page 12)
- 4 **Message key**
Access to calls and message lists;
Flashes: new message or new call
- 5 **End call key, On/Off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**
Keypad lock on/off (press and hold in idle status),
Toggle between upper/lower case and digits (press and hold)
- 7 **Call-by-call list key**
Open call-by-call list
- 8 **Microphone**
- 9 **Recall key**
- Confer (flash)
- Insert a dialling pause (press and hold)
- 10 **Star key**
Ringer tones on/off (press and hold);
With an open connection: switch between dial pulsing/touch tone dialling (press briefly)
Open special characters table
- 11 **Key 1**
Dial answer machine (S675 only)/network mailbox (press and hold)
- 12 **Connection socket** for headset
- 13 **Talk key**
Answer a call, open last number redial list (press briefly), start dialling (press and hold)
When writing an SMS: send SMS
- 14 **Handsfree key**
Switch between earpiece and handsfree mode;
Lights up: handsfree activated;
Flashes: incoming call
- 15 **Control key** (page 11)
- 16 **Eco mode** activated (page 13)
- 17 **Signal strength**
 (high to low)
 flashes: no reception
- 18 **Answer machine icon** (S675 only)
Answer machine switched on;
Flashes: answer machine is recording a message or is being operated by another internal party

The base station at a glance

You can use the keys on the base station to register handsets to the base station, search for handsets ("Paging", see page 43) and operate the integrated answer machine (Gigaset S675 only).

Base station Gigaset S675

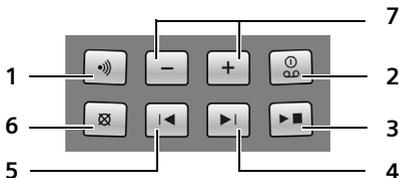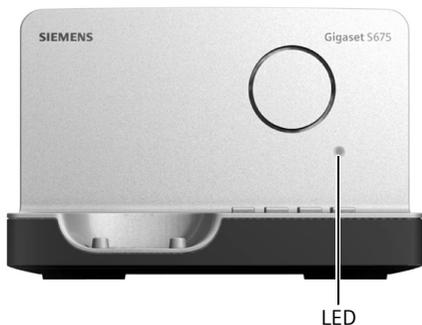

- 1 Registration/paging key
Press briefly: search for handsets "Paging", see page 43.
Press and hold: register handsets and DECT devices, see page 42.
- 2 On/Off key: activate/deactivate answer machine.
LED lights up: answer machine is activated.
LED flashes: at least one new message is present.

During message playback:

- 3 Play/stop key:
Play back new messages from the answer machine or cancel the playback (press briefly).
Play back new and old messages (press and hold).
- 4 Skip to next message (press once) or next message but one (press twice).
- 5 Skip back to beginning of message (press once) or to previous message (press twice).
- 6 Delete current message.
- 7 Adjust volume during message playback:
[-] = quieter; [+] = louder.
While an external call is being signalled: adjust ringer tone volume.

Please note:

- ◆ If the answer machine is being operated from a handset or if it is recording a message, it cannot be operated from the base station.
- ◆ If the LED flashes although the answer machine is switched off, it means that there is still at least one new message that has not been played back yet.

Base station Gigaset S670



- Registration/paging key:
- Press briefly: search for handsets "Paging", see page 43.
 - Press and hold: register handsets and DECT devices, see page 42.

Contents

| | |
|--|-----------|
| Handset at a glance | 1 |
| The base station at a glance | 2 |
| Safety precautions | 5 |
| Gigaset S670/S675 – More than just a telephone | 7 |
| First steps | 7 |
| Pack contents | 7 |
| Installing the base station and charging cradle | 7 |
| Setting up the handset for use | 8 |
| Operating the handset | 11 |
| Control key | 11 |
| Display keys | 12 |
| Reverting to idle status | 12 |
| Menu guidance | 12 |
| Correcting incorrect entries | 13 |
| ECO DECT | 13 |
| Menu tree | 14 |
| Making calls | 16 |
| Making an external call | 16 |
| Ending a call | 16 |
| Accepting a call | 16 |
| Calling Line Identification | 16 |
| Handsfree talking | 17 |
| Muting | 17 |
| Making calls easily using network services | 18 |
| Using the directory and lists ... | 19 |
| Directory/call-by-call list | 19 |
| Last number redial list | 22 |
| Opening lists with the message key | 23 |
| Making cost-effective calls | 25 |
| Linking call-by-call numbers with one number | 25 |
| Automatic network provider preselection (Preselection) | 25 |
| SMS (text messages) | 27 |
| Writing/sending an SMS | 27 |
| Receiving an SMS | 30 |
| Notification by SMS | 31 |
| SMS mailboxes | 32 |
| Setting SMS centres | 33 |
| SMS on a PABX | 33 |
| Activating/deactivating muting for the first ringer tone | 33 |
| Activating/deactivating the SMS function | 33 |
| SMS troubleshooting | 34 |
| Operating the answer machine of the Gigaset S675 base station | 35 |
| Operation via the handset | 35 |
| Activating/deactivating call screening | 38 |
| Setting up the answer machine | 39 |
| Resetting fast access for the answer machine using key 1 | 39 |
| Operating when on the move (remote control) | 40 |
| Using the network mailbox ... | 41 |
| Configuring fast access for the network mailbox | 41 |
| Viewing the network mailbox report | 41 |
| Using several handsets | 42 |
| Registering handsets | 42 |
| Deregistering handsets | 43 |
| Locating a handset ("paging") | 43 |
| Changing the base station | 43 |
| Making internal calls | 43 |
| Listening in to an external call | 44 |
| Changing the name of a handset | 45 |
| Changing a handset's internal number | 45 |
| Using a handset as a room monitor | 45 |

Contents

| | |
|--|-----------|
| Handset settings | 46 |
| Shortcuts for functions and numbers | 46 |
| Changing the display language | 47 |
| Setting the display | 47 |
| Setting the screensaver | 48 |
| Setting the display backlight | 48 |
| Activating/deactivating auto answer | 48 |
| Changing the handsfree/ earpiece volume | 49 |
| Changing ringer tones | 49 |
| My stuff | 50 |
| Activating/deactivating advisory tones | 51 |
| Setting the alarm clock | 52 |
| Setting an appointment (calendar) | 52 |
| Displaying missed appointments and anniversaries | 53 |
| Setting your own area code | 54 |
| Restoring the handset to the factory settings | 54 |
| Base station settings | 54 |
| Protecting against unauthorised access | 54 |
| Changing ringer tones (Gigaset S675 only) | 55 |
| Activating/deactivating music on hold | 55 |
| Repeater support | 55 |
| Restoring the base station to the factory settings | 55 |
| Connecting the base station to PABX | 56 |
| Dialling modes and recall | 56 |
| Saving an access code (outside line code) | 56 |
| Setting pauses | 57 |
| Switching temporarily to touch tone dialling (DTMF) | 57 |

| | |
|---|-----------|
| Appendix | 58 |
| Care | 58 |
| Contact with liquid | 58 |
| Questions and answers | 58 |
| Service (Customer Care) | 60 |
| Authorisation | 61 |
| Specifications | 61 |
| Notes on the user guide | 62 |
| Example of a menu input | 62 |
| Example of multiple line input | 63 |
| Writing and editing text | 63 |
| Accessories | 66 |
| Wall-mounting the base station | 69 |
| Index | 70 |

Safety precautions

Warning:

Read the safety precautions and the user guide before use.

Explain their contents and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle.



Fit only the **recommended, rechargeable batteries** (page 61), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, which you can find out about by contacting your local authority or the dealer you purchased the product from.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (page 58).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use or have them repaired by Siemens, as they could interfere with other wireless services.

Safety precautions



All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.

If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Please note:

Not all of the functions described in this manual are available in all countries.

Gigaset S670/S675 – More than just a telephone

Your phone, which has a clearly laid out colour display (65K colours) doesn't just offer you the option of sending and receiving SMS messages via the fixed network and of saving up to 250 phone numbers and e-mail addresses (page 19) – it can do much more besides:

- ◆ You can reduce the transmission power by activating the eco mode (page 13).
- ◆ You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key (page 46).
- ◆ You can easily make calls using network services (page 18).
- ◆ You can designate important people as VIPs so you can tell important calls from the ringer tone (page 20).
- ◆ You can assign pictures to your contacts. You can then tell who is calling you from the picture on your handset's display.
Precondition: Calling Line Identification (CLIP, page 16).
- ◆ You can save appointments (page 52) and anniversaries (page 21) in your phone and it will remind you of them in advance.

Enjoy using your new telephone!

First steps

Pack contents

- ◆ one Gigaset S670/S675 base station with mains adapter,
- ◆ one Gigaset S67H handset,
- ◆ one phone cord,
- ◆ two batteries,
- ◆ one battery cover,
- ◆ one belt clip,
- ◆ one user guide.

Installing the base station and charging cradle

The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5 °C to +45 °C.

Set up the base station at a central point in the apartment or house.

You can find instructions on how to mount the base station on the wall at the end of this user guide.

Please note:

- ◆ Never expose the telephone to heat sources, direct sunlight or other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Range and reception strength

Range:

- ◆ Outdoors: up to 300 m
- ◆ Indoors: up to 50 m

The range is reduced when eco mode is activated (see page 13).


Reception strength:

The display shows the quality of the radio range between the base station and handset:

- ◆ Good to poor: ▬▬▬ ▬▬▬ ▬▬▬ ▬▬▬
- ◆ No reception: ▬▬▬ flashes

Connecting the base station

- ▶ **First** connect the power supply unit and **then** the phone jack as shown below and place the cables in the cable recesses.

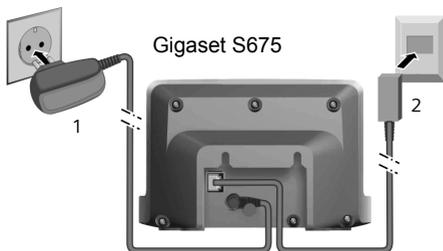


- 1 Mains adapter 230 V
- 2 Phone jack with phone cord

Please note:

- ◆ The mains adapter must **always be connected**, as the phone will not operate without mains connection.
- ◆ Only use the mains adapter and phone cord **supplied**.
- ◆ If you buy a replacement phone cord, make sure that the phone jack has the correct type of wiring.

Correct phone jack assignment

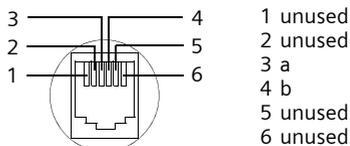

Setting up the handset for use



The display is protected by a plastic film.
Please remove the protective film!

Inserting the batteries

Warning:

Use only the rechargeable batteries recommended by Siemens (page 61). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.


- ▶ Insert the batteries the right way round (see figure).

The polarity is indicated in/on the battery compartment.



Closing the battery cover


- ▶ First, align the notches on the side of the battery cover with the protrusions on the inside of the housing.
- ▶ Then press the cover until it clicks into place.

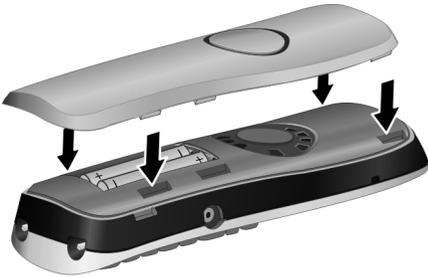

Attaching the belt clip


There are notches for attaching the belt clip on the side of the handset at the same height as the display.

- ▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.

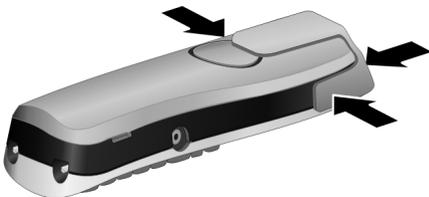

Opening the battery cover

- ▶ If fitted, remove the belt clip.
- ▶ Place your fingertip in the cavity in the casing and lift the battery cover upwards.

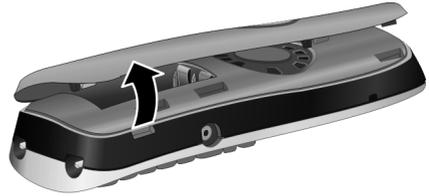

Placing the handset in the base station and registering

- ▶ Place the handset in the base station with its **display facing upwards**.

The handset registers automatically. Registration can take up to 5 minutes. During this time **Regstr.Procedure** appears in the display and the name of the base station flashes, e.g. **Base 1**. The handset will be assigned the lowest unassigned internal number (1–6).

This will appear in the display when registration is complete, e.g. **INT 1**. This means that the number 1 has been assigned. If the internal numbers 1–6 are already assigned to other devices, the number 6 is overwritten.

Please note:

- Automatic registration is only possible while no one is making calls using the base station.
- Each key press interrupts the automatic registration.
- If automatic registration does not work the handset will have to be registered manually (page 42).
- You can change the name of the handset (page 45).

To charge the batteries, leave the handset in the base station.

First steps

Please note:

- If the handset has turned itself off because the batteries are flat and if it is then placed in the charging cradle, it will turn itself on automatically.
- Only place the handset in the base station or charging cradle that is intended for it.

For questions and problems see page 58.

Headset socket

You can connect various headset types (with 2.5 mm jack connector), including: HAMA Plantronics M40, MX100 and MX150.

You can access a list of headsets that have been tested for compatibility on the Internet at www.plantronics.com/productfinder.

Initial charging and discharging of batteries

If the handset is activated, the flashing battery icon  in the top right of the display indicates that the batteries are being charged.

During handset operation, the battery icon indicates the charge status of the batteries (page 1). The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ To do this, leave the handset in the base station or charging cradle **continuously** for **seven** hours. Your handset need not be turned on for it to charge.
- ▶ Afterwards, remove the handset from the base station and do not put it back again until the batteries are fully discharged.

Please note:

After the first battery charge **and** discharge you may replace your handset in its base station after every call.

Please note:

- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while the charge capacity of the batteries will decrease for technical reasons.

Setting the date and time

The date and time must be set in order to, for example, have the correct time for incoming calls and be able to use the alarm clock and calendar.

- ▶ If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field with:

 →  → **Date/Time**

- ▶ Change multiple line input:

Date:

Enter the day, month and year in 8-digit format.

Time:


Enter hours and minutes as 4 digits, e.g.     for 07:15 a.m.

Save

Press the display key

Display in idle status

Once the phone is registered and the time set, the idle display is as shown here (example). If the answer machine is activated, the answer machine icon  will also be displayed in the header:

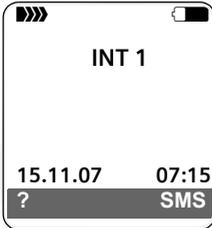

Your answer machine is set with a standard announcement.

Your phone is now ready for use.

If you have any queries about using your phone, please read the tips on troubleshooting ("Questions and Answers", page 58) or contact our customer service department (Customer Care, page 60).

Operating the handset

Activating/deactivating the handset



In idle status, press and hold the end call key (confirmation tone).

Activating/deactivating the keypad lock



Press and **hold** the hash key.

You will hear the confirmation tone. The  icon appears in the display when the keypad lock is activated.

The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.

Control key



In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".

The control key has a number of different functions:

When the handset is in idle status



Open the directory.



Open the main menu.



Open the list of handsets.



Call up the menu to set the call volume (page 49), ringer tones (page 49) and advisory tones (page 51) for the handset.

In the main menu and in input fields

You can use the control key to move the cursor up , down , right  or left .

In lists and submenus



Scroll up/down line by line.



Open submenu or confirm selection.



Go back one menu level or cancel.

During an external call



Open the directory.



Initiate internal consultation call and mute



Adjust the loudspeaker volume for earpiece and hands-free mode.

Display keys

The function of the display keys changes depending on the particular operating situation. Example:



- 1 Current display key functions are shown in the bottom display line.
- 2 Display keys

The most important display icons are:

- Left display key, as long as it has not been assigned a function (page 46).
- Open the main menu.
- Open a context-dependent menu.
- Delete key: deletes one character at a time from right to left.
- Go back one menu level or cancel operation.
- Fetch e-mail address from the directory.
- Copy number into directory.
- Divert external call to answer machine (S675 only).
- Open the last number redial list.

Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry** **OK** will be lost.

An example of the display in idle status is shown on page 1.

Menu guidance

Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

- ▶ Press with the handset in idle status to open the main menu.

The main menu functions are shown in the display with colour icons and names.

To access a function, i.e. to open the corresponding submenu (next menu level):

- ▶ Navigate to the function using the control key /. The name of the function is displayed in the display header. Press the display key **OK**.

Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key and press **OK**.

Or:

- ▶ Enter the corresponding digit combination (page 14).

Briefly press the end call key once to return to the previous menu level/cancel the operation.

Illustration in the user guide

The operating steps are shown in abbreviated form.

Example

The illustration:

 →  → **Date/Time**

means:

 Press the key to display the main menu.

 Use the control key  to scroll through submenu **Settings** and press **OK**.

Date/Time Scroll to the function with the control key  and press **OK**.

Other types of illustrations:

 /  /  etc.

Press the matching key on the handset.



Enter digits or letters.

You will find detailed examples of menu entries and multiple line input in the appendix to this user guide, page 62.

Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press **<C** to delete the character to the left of the cursor
- ◆ insert characters to the left of the cursor
- ◆ overwrite the character (flashing) when entering the time and date etc.

ECO DECT

ECO DECT reduces power consumption by using a power supply with low power consumption and also reduces the transmission power of the base station.

If only **one** handset is registered and it is in the base station, eco mode is always **activated automatically**. In this case, the transmission power of the base station is reduced to the minimum.

You can use your handset to reduce the transmission power on the base station **manually** even when the handset is not in the base station.

By doing so, you will reduce the transmission power even if you have several handsets registered.

Your handset also reduces the transmission power depending on the distance to the base station.

Activating/deactivating eco mode:

 →  → **Base** → **Add. Features**
→ **Eco Mode**

OK Press the display key ( = on).

If eco mode is activated manually, the  icon is displayed at the top of the screen. If eco mode is **activated** automatically (only one handset is registered and it is on the base station) and eco mode has **not** been activated via the menu, then the icon is **not** displayed.

Please note:

- Activating eco mode reduces the range of the base station.
- Eco mode and any repeater support (see page 55) cancel each other out, i.e. both functions cannot be used at the same time.
- If external handsets (GAP) and handsets from earlier Gigaset versions are used, your handset will **not** automatically reduce the transmission power to the base station.

Menu tree

Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).

Example: 8 2 2 1 for "Set ringer tone for external calls".

With the telephone in **idle status**, press (open main menu):

1 SMS

You have activated an SMS mailbox (general or private) without a PIN

| | | |
|-----|------------|-----------|
| 1-1 | New SMS | (page 27) |
| 1-2 | Incoming 0 | (page 30) |
| 1-3 | Outgoing 0 | (page 28) |

You have activated an SMS mailbox with a PIN or 2-3 mailboxes

| | | | | |
|------------|-------------------------------------|----------------|------------------|-----------|
| 1-1 | Mailbox | 1-1-1 | New SMS | (page 27) |
| | | 1-1-2 | Incoming 0 | (page 30) |
| | | 1-1-3 | Outgoing 0 | (page 28) |
| 1-2 to 1-4 | Mailbox 1 Mailbox 2 Mailbox 3 | 1-2-1 to 1-4-1 | New SMS | (page 27) |
| | | 1-2-2 to 1-4-2 | Incoming 0 | (page 30) |
| | | 1-2-3 to 1-4-3 | Outgoing 0 | (page 28) |
| 1-6 | Settings | 1-6-1 | Service Centres | (page 33) |
| | | 1-6-2 | SMS Mailboxes | (page 32) |
| | | 1-6-3 | Notify Number | (page 31) |
| | | 1-6-4 | Notify Type | (page 31) |
| | | 1-6-5 | Status Report | (page 28) |
| | | 1-6-6 | Subscribe to SMS | (page 27) |

3 Calls List (page 24)

4 Add. Features

| | | |
|-----|---------------|---------------------------|
| 4-3 | Room Monitor | (page 45) |
| 4-4 | Data Transfer | 4-4-3 Directory (page 21) |
| 4-6 | Missed Alarms | (page 53) |

5 Alarm Clock (page 52)

6 Calendar (page 52)

7 Resource Dir. 

| | | |
|-----|-----------------|-----------|
| 7-1 | Screensavers | (page 50) |
| 7-2 | Caller Pictures | (page 50) |
| 7-3 | Sounds | (page 50) |

8 Settings 

| | | |
|-----|----------------|---|
| 8-1 | Date/Time | (page 10) |
| 8-2 | Audio Settings | 8-2-1 Handset Volume (page 49) |
| | | 8-2-2 Ringer Settings (page 49) |
| | | 8-2-3 Advisory Tones (page 51) |
| 8-3 | Display | 8-3-1 Screen Saver (page 48) |
| | | 8-3-2 Colour Scheme (page 47) |
| | | 8-3-3 Contrast (page 47) |
| | | 8-3-4 Backlight (page 48) |
| 8-4 | Handset | 8-4-1 Language (page 47) |
| | | 8-4-2 Auto Answer (page 48) |
| | | 8-4-3 Register H/Set (page 42) |
| | | 8-4-4 Select Base (page 43) |
| | | 8-4-5 Area Codes (page 54) |
| | | 8-4-6 Reset Handset (page 54) |
| 8-5 | Base | 8-5-1 Ringer Settings (page 55) |
| | | 8-5-2 Music on hold (page 55) |
| | | 8-5-3 System PIN (page 54) |
| | | 8-5-4 Base Reset (page 55) |
| | | 8-5-5 Add. Features (page 13, page 44, page 56) |
| | | 8-5-6 Preselection (page 25) |
| | | 8-5-7 Calls List Type (page 24) |
| 8-6 | Voice Mail | 8-6-1 Set Key 1 (page 41) |
| | | only S675 base station: |
| | | 8-6-2 Ans Machine (page 35) |
| | | 8-6-3 Call Screening (page 38) |
| | | 8-6-4 Announcements (page 35) |
| | | 8-6-5 Message Length (page 39) |
| | | 8-6-6 Record Quality (page 39) |
| | | 8-6-7 Ring Delay (page 39) |

Making calls

Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

Or:

  Press and **hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

Please note:

Dialling using the directory, the call-by-call list (page 1, page 19) or the calls and last number redial list (page 24/page 22) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers").

Ending a call

 Press the end call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .
- ▶ Gigaset S670: Press the display key **Accept**.
- ▶ Gigaset S675: Press the display key  to divert the call to the answer machine (page 38).

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 48), the handset will take a call automatically when you lift it out of the cradle.

If the ringer tone is intrusive, press the display key **Silence**. You can take the call as long as it is displayed on the screen.


Calling Line Identification

When you receive a call, the caller's number and/or name is displayed on the screen if the following conditions are met:


- ◆ Your network provider supports CLIP, CLI and CNIP.
 - CLI (Calling Line Identification): the caller's number is transmitted.
 - CLIP (Calling Line Identification Presentation): the caller's number is displayed.
 - CNIP (Calling Name Identification Presentation): the caller's name is displayed.
- ◆ You have arranged CLIP or CNIP with your network provider.
- ◆ The caller has arranged CLI with the network provider.

Call display with CLIP/CLI

If the number of the caller is saved in your directory, you will see their name, and if you have assigned a CLIP picture to that caller, this will also be displayed.

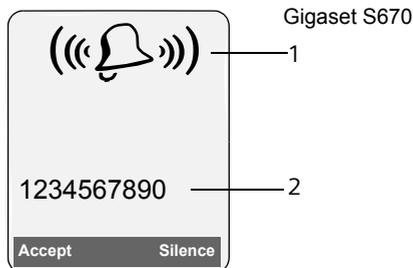

or

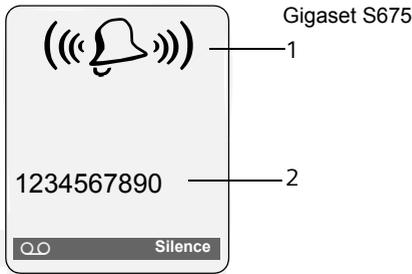

- 1 Ringer tone icon
- 2 Number or name of caller

The following is displayed in place of the number:

- ◆ **External**, if no number is transmitted.
- ◆ **Withheld**, if the caller has withheld Calling Line Identification.
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

Display with CNIP

If you have CNIP, then the name (town) that is registered with your network provider for the caller's number will **also** be displayed. If the number of the caller is saved in your directory, the CNIP display is replaced by the corresponding directory entry.

| | |
|--------------------------|---|
| 1234567890 | 1 |
| Anna Fielding, London | 2 |

- 1 Caller's number
- 2 Name and town

The display shows:

- ◆ **External**, if no number is transmitted.
- ◆ **Withheld**, if the caller has withheld Calling Line Identification.
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

Handsfree talking

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

Activating/deactivating handsfree mode

Activating while dialling



Enter the number and press the handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

Switching between earpiece and handsfree mode



Press the handsfree key.

During a call and when listening to the answer machine (Gigaset S675 only), activate or deactivate handsfree.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base station. If the handsfree key  does not light up, press the key again.

For how to adjust the loudspeaker volume, see page 49.

Muting

You can deactivate the microphone in your handset during an external call. The other party hears hold music.



Press the control key on the left to mute the handset.



Press the display key to reactivate the microphone.

You can turn the hold music on and off (page 55).

Making calls easily using network services

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ **If you require assistance, please contact your network provider.**

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Call-by-call list
- ◆ Last number redial list
- ◆ SMS list
- ◆ Call history
- ◆ List of missed calls
- ◆ Answer machine list
(Gigaset S675 only).

You can save a total of 250 entries in the directory and call-by-call list.

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 21).

Directory/call-by-call list

Please note:

For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key.

Directory

In the **directory** you can save

- ◆ Up to three numbers and associated first names and surnames
- ◆ VIP designation and VIP ringer tone (optional)
- ◆ E-mail address (optional)
- ◆ CLIP pictures (optional)
- ◆ Anniversaries with reminder
- ▶ With the handset in idle status, open the directory by pressing the  key.

Length of the entries (directory)

3 numbers:

each max. 32 digits

First name and surname:

each max. 16 characters

E-mail address:

max. 60 characters

Call-by-call list

The **call-by-call list** is used to store the access codes for network providers ("call-by-call numbers").

- ▶ Open the call-by-call list in idle status by pressing the  key.

Length of entries

Number: max. 32 digits

Name: max. 16 characters

Saving a number in the directory

 → **New Entry**

- ▶ Change multiple line input:

First Name / Surname:

Enter a name in at least one of the fields.

Phone (Home) / Phone (Office) / Phone (Mobile)

Enter a number in at least one of the fields.

E-mail

Enter e-mail address.

Annivers.:

Select **On** or **Off**.

With setting **On**:

Enter **Anniversary (Date)** and **Annivers. (Time)** (page 21) and select reminder type: **Annivers. (Signal)**.

Caller Picture

If required, select a picture to be displayed when the caller calls (see My stuff, page 50).

Precondition: Calling Line Identification (CLIP).

- ▶ Save changes: (page 63).

Saving a number in the call-by-call list

 → **New Entry**

- ▶ Change multiple line input:

Name:

Enter name.

Number:

Enter number.

Order of directory entries

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

Selecting entries in the directory and call-by-call list

 /  Open directory or call-by-call list.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name (in the directory: first character of the surname or of the first name if **only** the first name has been entered), or scroll to the entry using .

Dialling with the directory/call-by-call list

 /  →  (select entry)

 Press the talk key. The number is dialled.

Managing entries in the directory/call-by-call lists

 /  →  (select entry)

Viewing entries

View Press the display key. The entry is displayed.
Back with **OK**.

Editing entries

View **Edit** Press display keys one after the other.

- Carry out changes and save.

Using other functions

 /  →  (select entry)
→ **Options** (open menu)

The following functions can be selected with :

Display Number

To edit or add to a saved number, or to save it as a new entry, press   after the number is displayed.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

VIP Entry (directory only)

Mark a directory entry as a **VIP** (Very Important Person) and assign a specific ringer tone to it. You can then recognise important calls from the ringer tone.

Precondition: Calling Line Identification (page 16).

Copy Entry

Send a single entry to a handset (page 21).

Delete List

Delete **all** entries in the directory/call-by-call list.

Copy List

Send complete list to a handset (page 21).

Available Memory

Display the available entries in the directory and call-by-call list (page 19).

Using quick dial keys

- ▶ Press and **hold** the required quick dial key (page 46).

Sending the directory/call-by-call list to another handset**Preconditions:**

- ◆ The sending and receiving handsets must both be registered on the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 /  →  (select entry)
→ **Options** (open menu) → **Copy Entry / Copy List** → **to Internal**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the **Copy next entry?** prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:

You can also send the complete **directory** via data transfer, without opening the directory:

 →  → **Data Transfer** → **Directory**

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

Copying a displayed number to the directory

You can copy numbers displayed in a list, e.g. the call history or the last number redial list, in an SMS or during a call to the directory.

If you have CNIP, the first 16 characters of the transmitted name are copied to the **Name** line.

A number is displayed:

Options → **Copy to Directory**

- ▶ Complete the entry, see page 19.

Gigaset S675: The message playback is interrupted during the number transfer from the answer machine list.

Copying a number or e-mail address from the directory

In many operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.

- ▶ Depending on the operating situation, open the directory with  or  or  **Directory**.

 Select an entry (page 20).

Saving an anniversary in the directory

For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (delivery status: **Annivers.:** Off).

Using the directory and lists

Anniversaries are automatically recorded in the calendar (page 52).

 →  (select entry; page 20)

View **Edit** Press display keys one after the other.

 Scroll to the **Annivers.:** line.

 Select **On**.

▶ Change multiple line input:

Anniversary (Date)

Enter day/month/year in 8-digit format.

Annivers. (Time)

Enter the hour/minute for the reminder call in 4-digit format.

Annivers. (Signal)

Select the type of signal for the reminder.

▶ Save changes: (page 63).

Please note:

A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

Deactivating anniversaries

 →  (select entry; page 20)

View **Edit** Press display keys one after the other.

 Scroll to the **Annivers.:** line.

 Select **Off**.

Save Press the display key.

Reminder call on an anniversary

A reminder call is signalled on the handset using the selected ringer tone.

You now have the following options:

SMS Write an SMS

OFF Press the display key to acknowledge and end the reminder call.

Viewing missed anniversaries

In idle status, you are reminded of an elapsed and unacknowledged anniversary by the **one-off** display of **Appoint.**

▶ View appointment:

Appoint. Press the display key.

You now have the following options:

SMS Write an SMS

Delete Delete the reminder. After deleting, press the  or

Go Back display key:

Back in idle status, **Appoint.** is no longer displayed.

You can also view missed anniversaries afterwards (see page 53).

Last number redial list

The last number redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If a number is in the phone book or the call-by-call list, then the appropriate name will be displayed.

Manual last number redial

 Press the key **briefly**.

 Select entry.

 Press the talk key again. The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

Managing entries in the last number redial list

 Press the key **briefly**.

 Select entry.

Options Open menu.

The following functions can be selected with :

Copy to Directory

Copy an entry to the directory (page 19).

Automatic Redial

The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes and "open listening" is activated.

- Called party answers: press the talk key . The function is ended.
- Called party does not answer: the call is terminated after approx. 30 seconds. The function is ended after pressing any key or after ten unsuccessful attempts.

Display Number (as in the directory, page 20)

Delete Entry (as in the directory, page 20)

Delete List (as in the directory, page 21)

Opening lists with the message key

You can use the message key  to open the following list selection:

◆ SMS list

If **several** mailboxes are set up (page 32), several lists are displayed.

◆ Answer machine list (Gigaset S675 only) or network mailbox, if your network provider supports this function and the fast access is set for the network mailbox (page 41).

◆ Call history


An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:

| Icon | New message... |
|---|--|
|  | ... in the answer machine list (Gigaset S675 only) or on the network mailbox |
|  | ... in the call history |
|  | ... in SMS list |

The number of new entries is shown beneath the corresponding icon.

List selection

If you press the message key , only the lists that contain messages are shown (exception: network mailbox). Lists with new messages are identified in bold:

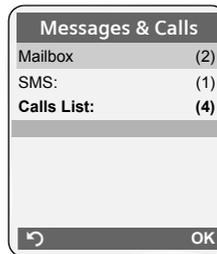

Select a list with . To open, press  or **OK**.

If only one list contains entries, no list selection is offered and the relevant list is displayed immediately.

Incoming SMS message list

All received SMS messages are saved in the incoming message list, page 30.

Call history

Precondition: Calling Line Identification (CLIP, page 16)

Depending on the type of list set, the call history contains

- ◆ accepted calls ()
- ◆ missed calls
- ◆ calls recorded by the answer machine (∞, Gigaset S675 only)

Depending on the type of list set, all numbers of the last 30 incoming calls are saved or just the missed calls are saved. The list of missed calls does not contain calls that were answered or recorded by the answer machine (Gigaset S675 only).

You can also call up the call history via the menu:

 → **Calls List**

Setting the calls list type

 →  → **Base** → **Calls List Type**

Missed Calls / All Calls

Select and press **OK** (= on).

 Press and **hold** (idle status).

The calls list entries are retained when you change the list type.

List entry

New messages are displayed at the top.

Example of list entries:



- ◆ List type (in header)
- ◆ Status of entry
Bold: new entry

- ◆ Number or name of caller
You can add the caller's number to the directory (page 21).
- ◆ Date and time of call (if set, page 10)
- ◆ Type of entry:
 - accepted calls ()
 - missed calls
 - calls recorded by the answer machine (∞, Gigaset S675 only)

Pressing the display key **Delete** deletes the marked entry.

After pressing the display key **Options** you can select more functions with :

Copy to Directory

Copy number to the directory.

Delete List

Delete complete list.

Information

See following section entitled "Displaying CNIP information".

When you quit the call history, all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold.

Answer machine list (Gigaset S675 only)

You can use the **answer machine list** to listen to the messages that are on the answer machine.

Displaying CNIP information

If you have CNIP, you can display the name and town that is registered with your network provider for this number.

You have selected a list entry.

Options Open menu.

Information Select and press **OK**.

If the name and town are not shown, it means that the caller has not requested Calling Line Identification or that Calling Line Identification has been withheld.

Press **OK** to return to the list.

Making cost-effective calls

Sign up with a network provider who offers particularly low-cost call rates (call-by-call). You can manage the numbers in the call-by-call list.

Linking call-by-call numbers with one number

You can insert the dialling code of a network provider ahead of the number ("linking").



Open call-by-call list.



Select entry (call-by-call number).

Options

Press the display key.

Display Number

Select and press **OK**.



Enter number or select number from the directory (page 21).



Press the talk key. Both numbers are dialled.

Automatic network provider preselection (Preselection)

You can specify a call-by-call number (preselection number) which is **automatically** placed in front of numbers when you dial them.

- ◆ The **"with preselection"** list contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used.

- ◆ The **"without preselection"** list contains the "exception to the rule".

Example:

You have entered 08 for "with preselection". Consequently, all numbers that start with 08 are dialled with preselection.

If, for example, you want 081 to still be dialled without preselection, enter 081 for "without preselection".

When dialling, the **first** digits of the selected numbers are compared with both lists after the talk/handsfree key is pressed:

- ◆ The preselection number is not prefixed if the dialled number
 - **does not** match any entries in the two lists
 - matches an entry in the **"without preselection"** list
- ◆ The preselection number is prefixed if the first digits of the dialled number match with **only** one entry in the list **"with preselection"**.

Saving preselection numbers



→ → Base → Preselection
→ Preselect No.



Enter or change the preselection number (call-by-call number).

Save

Press the display key.



Press and **hold** (idle status).

Save or change entries in the preselection lists

Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "**with preselection**" list. This means e.g. that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have saved previously.

 →  → **Base** → **Preselection**
→ **With Preselect / Without Presel.**

 Select entry.

Edit Press the display key.

 Enter or edit first digits of number.

Save Press the display key.

 Press and **hold** (idle status).

Temporarily cancelling preselection

 (press and **hold**) → **Options**
→ **Aut Preselect off**

Permanently deactivating preselection

- ▶ Delete the preselection number (page 25).

SMS (text messages)

Your unit is supplied ready for sending SMS messages immediately.

Preconditions:

- ◆ Calling Line Identification is enabled for your phone line.
- ◆ Your network provider supports SMS in the fixed network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS.

SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from **every** SMS centre that is entered, provided you have registered with your service provider.

Your SMS messages are sent via the **Service Centr.** that is shown as the **active send service centre**. However, you can activate any other SMS centre as the active send service centre to send a current message (page 33).

If no SMS Service Centre is entered, the SMS menu only contains the entry **Settings**. Enter an SMS Service Centre (page 33).

Information on writing an SMS can be found in the appendix:

- ◆ For how to enter text, see page 63.
- ◆ Writing using the predictive text tool EATONI, see page 64.

Rules

- ◆ An SMS can be up to 612 characters.
- ◆ If there are more than 160 characters, the SMS is sent as a **linked** SMS (up to 4 SMS messages with 153 characters each).

Please note:

- ◆ Each incoming SMS is signalled by a single ring (ringer tone as for external calls). If you accept an SMS "call", the SMS will be lost. To prevent this ring, suppress the first ringer tone for all external calls (page 33).
- ◆ If your phone is connected to a PABX, please read page 33.
- ◆ To receive SMS messages you must be registered with your service provider.

Registering with the registration wizard

The first time you press the display key **SMS** you will be asked whether you wish to register automatically with all entered SMS centres (see page 33). Confirm with **Yes** or refuse with **No** to abort automatic registration. You can now receive SMS messages from all SMS centres whose numbers you have entered.

You can call up automatic registration thereafter via the menu:

 →  → **Settings** → **Subscribe to SMS**

The registration wizard does not support setting up personal mailboxes (page 32).

Writing/sending an SMS

Writing an SMS

 → 

Mailbox 2 Select mailbox if necessary and press **OK**.

 Enter mailbox PIN if necessary and press **OK**.

New SMS Select and press **OK**.

 Write an SMS.

Please note:

- Instructions on entering text can be found at page 63 and on writing with EATONI predictive text at page 64.
- EATONI is activated as a default setting. Activating/deactivating EATONI see page 65.

SMS (text messages)

Sending an SMS



Press the talk key

Or:

Options

Press the display key.

Send

Select and press **OK**.

SMS

Select and press **OK**.



Select number with area code (even if you are in that area) from the directory or call-by-call list, or enter number directly. For SMS to an SMS mailbox: add the mailbox ID to the **end** of the number.

Send

Press the display key. The SMS is sent.

Please note:

- If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft message list.
- If the memory is full, or if the SMS function on the base station is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.

Setting input language

- ▶ You are writing an SMS (page 27).

Options

Press the display key.

Select Language

Select and press **OK**.



Select input language and press **OK**.



Press the end call key **briefly** twice to return to the text panel.

The input language setting only applies to the current SMS.

SMS status report

Precondition: Your network provider supports this feature.

If you have activated the status report, you will receive an SMS with a confirmation message after sending.

Activating/deactivating a status report

→ → **Settings**

Status Report

Select and press **OK** (= on).

Reading/deleting status report/saving number to directory

- ▶ Open the incoming message list (page 30) and then:



Select SMS with the **State OK** or **State not OK** status.

Read

Press the display key.

- ◆ Delete:

Options Delete Entry **OK**.

- ◆ Save to directory:

Options Copy to Directory **OK**.

- ◆ Delete entire list:

Options Delete List **OK**.

Draft message list

You can save an SMS in the draft message list and edit and send it later.

Saving an SMS in the draft message list

- ▶ You are writing an SMS (page 27).

Options

Press the display key.

Save Entry

Select and press **OK**.

Opening the draft message list



→ → (mailbox, mailbox PIN)
→ **Outgoing** (3)

The first list entry is displayed, e.g.:

| |
|----------------|
| 1234567890 |
| 21.11.07 09:45 |

Reading or deleting individual SMS messages

- ▶ Open the draft message list and then:



Select SMS.

Read

Press the display key. The entry will be displayed. Scroll line by line using .

Or delete the SMS with

Options **Delete Entry** **OK**.

Writing/changing an SMS

- ▶ You are reading an SMS in the draft message list.

Options Open menu.

You have the following options:

New SMS

Write a new SMS and then send (page 28) or save it.

Edit

Edit the text of the saved SMS and then send (page 28).

Character Set

Text is shown in the selected character set.

Deleting draft message list

- ▶ Open the draft message list and then:

Options

Open menu.

Delete all

Select, press **OK** and confirm with **Yes**. The list is cleared.



Press and **hold** (idle status).

Sending SMS messages to an e-mail address

If your service provider supports the **SMS as e-mail** feature, you can also send your SMS messages to e-mail addresses.

The e-mail address must be at the beginning of the text. You must send the SMS to the e-mail service of your SMS send centre.

→ → (mailbox, mailbox PIN)
→ **New SMS**

E-Mail /

Load the e-mail address from the directory or enter it directly. End the entry with a space or colon (depending on the service provider).



Enter the SMS text.

Options

Press the display key.

Send

Select and press **OK**.

E-mail

Select and press **OK**. If the number of the e-mail service is not entered (page 33), enter the number of the e-mail service.

Send

Press the display key.

Sending SMS messages as a fax

You can also send an SMS to a fax machine.

Precondition: Your network provider supports this feature.

- ▶ You are writing an SMS (page 27).

Options

Press the display key.

Send

Select and press **OK**.

Fax

Select and press **OK**.



Select number from the directory or enter directly. Enter the number with dialling code (even if you are in the same area).

Send

Press the display key.

Receiving an SMS

All received SMS messages are saved in the incoming message list. Linked SMS messages are displayed as **one** message. If this is too long or is not transferred completely, it is split into individual messages. Since an SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.

The display tells you if the SMS memory is full.

- ▶ Deleting SMS messages you no longer require (page 30).

Incoming message list

The incoming message list contains:

- ◆ All received SMS messages, starting with the most recent.
- ◆ SMS messages that could not be sent due to an error.


New SMS messages are signalled on all Gigaset S67H handsets by the  icon in the display, the flashing message key  and an advisory tone.

Opening the incoming message list with the key

 Press.

Select mailbox if necessary and enter mailbox PIN.

The incoming message list is displayed as follows (example):

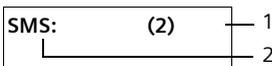

- 1 **bold:** number of new entries
- regular:** number of read entries
- 2 Name of mailbox, here: general mailbox

Open list with **OK**.

An entry in the list is displayed as in the following example:

```
1234567890
21.11.07 09:45
```

Opening the incoming message list via the SMS menu

 →  → (mailbox, mailbox PIN)
→ Incoming (2)

Reading or deleting individual SMS messages

- ▶ Open the incoming message list.
- ▶ Continue as described in "Reading or deleting individual SMS messages", page 29.

After you have read a new SMS, it is given the status "Old" (is no longer shown in bold).

Deleting the incoming message list

All **new and old** SMS messages in the list are deleted.

- ▶ Open the incoming message list.

Options Open menu.

- ▶ To continue, see "Deleting draft message list", page 29.

Replying to or forwarding SMS messages

- ▶ Read the SMS (page 30):

Options Press the display key.

You have the following options:

Reply

Write and send a reply SMS directly (page 27).

Edit

Edit the text in the SMS and then send it (page 28).

Forwarding an SMS

- ▶ You are reading an SMS (page 30):

Options Press the display key.

Forward Select and press **OK**. For further information, see page 28.

Adding numbers to the directory

Adding the sender's number

- ▶ Open incoming message list and select entry (page 30).

Options Press the display key. For further information, see page 21.

Please note:

- You can create a special directory for SMS messages within your main directory by putting a star (*) before the names.
- An attached mail box identifier is added to the directory.

Copying/dialling numbers from an SMS text

- ▶ Read the SMS (page 30) and scroll to the telephone number.

The digits are reverse-highlighted.

 Press the display key. For further information, see page 21.

Or:

 Press the talk key to dial the number.

If you wish to use the number to send an SMS:

- ▶ Save the number with the local area code (dialling code) in the directory.

Changing the character set

- ▶ Read the SMS (page 30):

Options Press the display key.

Character Set

Text is shown in the selected character set.

Notification by SMS

You can be notified about missed calls or new answer machine messages (Gigaset S675 only) via SMS.

Precondition: For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.

You only need to set the phone number to which notification should be sent (notification number) and the notification type.

Saving the notification number

 →  → **Settings** → **Notify Number**



Enter the number to which the SMS should be sent.

Save

Press the display key.



Press and **hold** (idle status).

Warning:

Do **not** enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping.

Setting the notification type

 →  → **Settings** → **Notify Type**

- ▶ Change multiple line input if necessary:

Missed Calls:

Set **On** if you require SMS notification.

Ans Machine:

(Gigaset S675 only)

Set **On** if you require SMS notification.

- ▶ Save changes (page 63).

SMS mailboxes

The **general mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can additionally set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "mailbox ID" (a kind of extension number).

Please note:

- ◆ If you operate a number of devices (base stations) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").
- ◆ You can only use personal mailboxes if your service provider supports this function. You can tell whether this is the case by the addition of a star (*) to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the base station's default settings. This will **delete all SMS messages from all mailboxes**.

Setting up and changing a personal mailbox

Setting up a personal mailbox

 →  → **Settings** → **SMS Mailboxes**

 Select mailbox, e.g. **Mailbox 2** and press **OK**.

- ▶ Change multiple line input:

On/Off:

Activate or deactivate mailbox.

ID:

Select mailbox ID (0–9). You can only select the available numbers.

Protection:

Activate/deactivate PIN protection.

PIN

If necessary, enter 4-digit PIN.

- ▶ Save changes (page 63).

Active mailboxes are marked with in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

Deactivating a mailbox

- ▶ Set **On/Off:** to **Off**. Confirm message with **Yes** if necessary.

All SMS messages saved in this mailbox will be deleted.

Deactivating PIN protection

- ▶ Set **Protection:** to **Off**.

The mailbox PIN is reset to "0000".

Changing the name of a mailbox

 →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

Edit Press the display key.

 Enter new name.

Save Press the display key.

 Press and **hold** (idle status).

Changing a mailbox's PIN and ID

 →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

 Enter mailbox PIN if necessary and press **OK**.

- ▶ Set **ID**, **Protection:** and **PIN** (page 32).

Sending an SMS to a personal mailbox

To send an SMS to a personal mailbox, the sender must know your ID and enter it after your number.

- ▶ You can send your SMS contact an SMS via your personal mailbox.

Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

Setting SMS centres

Entering/changing SMS centres

- ▶ You should find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → **Settings** → **Service Centres**

 Select SMS centre (e.g. **Service Centr. 1**) and press **OK**.

- ▶ Change multiple line input:

Active Send:

Select **Yes** if SMS messages are to be sent via the SMS centre. For the SMS centres 2 to 4, the setting only applies to the next SMS.

SMS:

Press the display key **Edit**. Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

E-mail:

Press the display key **Edit**. Enter the number of the e-mail service.

- ▶ Save changes (page 63).

Please note:

Ask your service provider for details on how to enter service numbers if you wish to use personal mailboxes (precondition: your service provider supports this function).

Sending an SMS through another SMS centre

- ▶ Activate the SMS centre (2 to 4) as the active send service centre.
- ▶ Send the SMS.

This setting only applies to the next SMS to be sent. Thereafter, the setting returns to **Service Centr. 1**.

SMS on a PABX

- ◆ You can only receive an SMS when the **Calling Line Identification** is **forwarded to the extension of the PABX (CLIP)**. The CLIP evaluation of the number of the SMS centre happens in your **Gigaset**.
- ◆ If required, you must prefix the number for the SMS centre with the access code (depending on your PABX).
If in doubt, test your PABX, e.g. by sending an SMS to your own number: once with and once without the access code.
- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.

Sending and receiving SMS messages on **ISDN PABXs** is only possible via the MSN number assigned to your base station.

Activating/deactivating muting for the first ringer tone



Open menu.



Press keys.



First ring audible.

Or:



First ring muted.

Activating/deactivating the SMS function

If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone.

The settings which you have made for sending and receiving SMS messages (e.g. the call numbers of the SMS centres) and the entries in the incoming and draft message lists are saved even after you turn off your phone.

SMS (text messages)



Open menu.



Enter the digits.



Deactivate SMS function.

Or:



Activate SMS function (default setting).

SMS troubleshooting

Error codes when sending

| | |
|----|---|
| EO | Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated. |
| FE | Error occurred during SMS transfer. |
| FD | Connection to SMS centre failed, see self-help. |

Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

You cannot send messages.

- You have not requested the CLIP service (Calling Line Identification Presentation).
 - Ask your service provider to enable this service.
- SMS transmission has been interrupted (e.g. by a call).
 - Re-send the SMS.
- Network provider does not support this feature.
- No number or an invalid number is entered for the SMS centre set as the active send service centre.
 - Enter the number (page 33).

You receive an incomplete SMS.

- Your phone's memory is full.
 - Delete old SMS messages (page 30).
- The service provider has not yet sent the rest of the SMS.

You have stopped receiving SMS messages.

- You have changed the ID of your mailbox.
 - Give your SMS contacts your new ID or undo the change (page 32).
- You have not activated your mailbox.
 - Activate your mailbox (page 32).
- Call diversion is activated with **When: All Calls** or the **All Calls** call diversion is activated for the network mailbox.
 - Change the call diversion

The message is played back.

- The "display call number" service is not activated.
 - Ask your service provider to activate this function (chargeable).
- Your mobile phone operator and your fixed network SMS service provider have not agreed on a co-operation.
 - Obtain information from your fixed network SMS service provider.
- Your terminal is recorded by your SMS provider as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
 - Start the registration wizard for automatic registration (see page 27).
 - Have the device (re-)registered to receive SMS messages.

Messages are only received during the day.

- The terminal is recorded in your SMS provider's database as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
- Start the registration wizard for automatic registration (see page 27).
 - Obtain information from your fixed network SMS service provider.
 - Have the device (re-)registered to receive SMS messages.

Operating the answer machine of the Gigaset S675 base station

You can operate the answer machine that is integrated into the base station using the keys on the base station (see page 2), via the handset or by remote control (other phone/mobile phone). Your own announcement message or advisory message can only be recorded via the handset.

Announcement mode

You can use the answer machine in two different modes.

- ◆ In **Ans. & Record** mode, the caller hears the announcement and can then leave a message.
- ◆ In **Announce Only** mode, the caller hears your announcement but cannot leave a message.

Operation via the handset

The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the handsfree key .

Activating/deactivating the answer machine

 →  → **Voice Mail** → **Ans Machine**
 = on)

When you switch the answer machine on, the remaining memory time is announced. If the time has not yet been set (page 10), an appropriate announcement is made. The  icon appears in the display.

The phone is supplied with pre-recorded announcements for answer and record mode and for announce only mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used.

Recording a personal announcement/announce only

 →  → **Voice Mail** → **Announcements**
 → **Record Announce / Record Anc Only**

OK Press the display key to start the recording.

You hear the ready tone (short tone).

- ▶ Now speak your announcement (at least 3 secs.).

End Press the display key to end the recording.

Cancel the recording with  or .
 Restart the recording with **OK**.

After recording, the announcement is played back for you to check. You can re-record the announcement with **New**.

Please note:

- ◆ Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- ◆ If you cancel the recording, the pre-recorded announcement will be used again.
- ◆ If the answer machine's memory is full, it will switch to **Announce Only** mode.
 - ▶ Delete old messages and the answer machine will automatically switch back to **Ans. & Record** mode. Repeat recording if required.

Playing back announcements

 →  → Voice Mail → Announcements
→ Play Announcement / Play Anc Only

If you have not recorded a personal announcement, the relevant pre-recorded announcement is played.

Record a new announcement while playing back announcement:

New Press the display key.

If the answer machine's memory is full, it will switch to **Announce Only** mode.

- ▶ Delete old messages and the answer machine will automatically switch back to **Ans. & Record** mode. Repeat recording if required.

Deleting announcements/announce only

 →  → Voice Mail → Announcements
→ Del Announcement / Del Anc Only

Yes Press the display key to confirm the prompt.

 Press and **hold** (idle status).

Once you have deleted your announcement, the relevant pre-recorded announcement will be used again.

Selecting announcement mode

You can choose between **Ans. & Record** and **Announce Only**.

 →  → Voice Mail → Announcements
→ Set Ans. Mode → Ans. & Record /
Announce Only (= on)

 Press and **hold** (idle status).

The selected mode is saved even after the answer machine is deactivated.

If the memory for messages is full in **Ans. & Record** mode, the answer machine will switch to the **Announce Only** mode and you will receive an instruction to delete old messages.

- ▶ Delete old messages.

The answer machine **automatically** switches back to the set mode once deletion is complete. You can then reselect the required recording mode.

Setting "answer and record" or "announce only" by toggling

You can use the **Ans Mode Time** setting to change over the announcement mode for a specific period.

Example: **Ans. & Record** mode is set. If you activate **Ans Mode Time** and set a period (e.g. 18:00 to 08:00) the answer machine switches to **Announce Only** mode for this period. Outside this period (08:01 to 17:59), **Ans. & Record** mode is active.

 →  → Voice Mail → Announcements
→ Set Ans. Mode → Ans Mode Time
(= on)

- ▶ Change multiple line input:

From:

Enter hours/minutes for the start of the period in 4-digit format.

Until:

Enter hours/minutes for the end of the period in 4-digit format.

Activation:

Select **On** or **Off**.

- ▶ Save changes with **Save**.

If the messages memory is full and **Activation: On** has been selected, saving is interrupted and you will receive an instruction to delete old messages.

- ▶ Delete old messages and repeat the setting.

As soon as you change the announcement mode (page 36), the **Ans Mode Time** function is automatically deactivated.

Playing back messages

The date and time of each message is logged (provided this has been set, page 10) and displayed during the playback. If Calling Line Identification is activated, the caller's number or name is displayed. If the caller's number is saved in the directory, their name is displayed.

Playing back new messages

New messages that have not yet been heard are indicated by the ∞ icon in the display and by the  key flashing on the handset.

 Press the message key.

Ans M.: Select and press **OK**.

An announcement informs you if there are new or old messages.

If there are new messages, playback then begins with the first new message. After the last new message you will hear the end tone and an announcement about how much recording time remains.

If the message has been saved with the date and time you will hear an appropriate announcement before playback begins.

Playing back old messages

You can listen to old messages if there are no more new messages. Begin playback as described under "Listening to new messages".

After the entry time and date have been played back (after approx. 3 seconds) a new message assumes the status "old".

Stopping and controlling playback

During message playback:

 Pause playback. Press  again to resume.

 or  To the previous message.

 or  To the next message.

2 x  To next-but-one message.

If playback is interrupted for over a minute, the answer machine returns to idle status.

Reading CNIP information of a message

► Please read page 24.

Marking a message as "new"

A previously played back "old" message is displayed as a "new" message again.

During message playback:

 Press the star key.

An announcement informs you of the message's new status.

Or:

Options Open menu.

Mark as New

Select and press **OK**.

Playback of the current message is cancelled. Playback of next message starts, if applicable.

The  key on the handset flashes.

Adding the telephone number of a message to the directory

See "Copying a displayed number to the directory", page 21.

Deleting messages

You can either delete all old messages together or individually.

Deleting all old messages

During playback or pause:

Options Press the display key.

Del All Old Msgs

Select and press **OK**.

Yes Press the display key to confirm the prompt.

Deleting individual old messages

During playback or pause:

Delete Press the display key.

Picking up a call from the answer machine

You can pick up a call while the answer machine is recording or is being operated via remote operation:



Press the talk or display key.

Recording stops and you can speak to the caller.

If 2 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. The  key on the handset flashes.

You can accept the call even if it is not signalled on the handset.

Diverting an external call to the answer machine

You can divert an incoming external call to the answer machine even if it is deactivated.

Precondition: Sufficient memory space is available on the answer machine.

An external call is signalled on the handset:



Press the display key.

The answer machine starts immediately in recording mode and records the call. The set time for the call acceptance (page 39) is ignored.

Activating/deactivating two-way recording

You can record an **external** call with the answer machine.

- ▶ Inform the caller that the call is being recorded.



Open menu.

Two Way Record

Select and press **OK**.

The two-way recording is indicated on the display by an advisory text and is added to the answer machine list as a new message.



Press the display key to stop the two-way recording.

The maximum recording time depends on the memory available on the answer machine. If the memory is full you will hear an end tone, the recording is aborted and the call recorded up to that point is listed in the answer machine list as a new message. If the answer machine was in **Ans. & Record** mode, it will switch to the **Announce Only** mode. You will receive an instruction to delete old messages.

- ▶ Delete old messages.

The answer machine **automatically** switches back to the set mode once deletion is complete.

Activating/deactivating call screening

During recording of a message you can listen in via the loudspeaker of registered handsets.

Permanently activating/deactivating call screening

 →  → **Voice Mail** → **Call Screening**
→ **Handset**

 = on



Press and **hold** (idle status).

You can switch off the **Call Screening** function on the handset during the recording.

Switching off call screening for the current recording



Press the end call key.

Setting up the answer machine

The answer machine has already been preset at the factory. Make individual settings using the handset.

Call acceptance/charge saving function for remote operation

You can set when you want the answer machine to accept a call.

The options are: **0 sec.**, after **10 sec.**, **18 sec.** or **30 sec.** and the cost-saving setting **Automatic**.

In **Automatic** mode, the following applies for call acceptance:

- ◆ If there are no new messages, the answer machine accepts a call after 18 seconds.
- ◆ If new messages are present, the answer machine accepts a call after **10 seconds**.

When operating remotely you can tell after approx. 15 seconds that there are no new messages (otherwise the answer machine would already have accepted your call). There will be no call charges if you hang up now.

 →  → **Voice Mail** → **Ring Delay**

Select  **0 sec. / 10 sec. / 18 sec. / 30 sec. / Automatic.**

Save Press the display key.

 Press and **hold** (idle status).

Please note:

You can configure your telephone so that the **first** ringer tone is **suppressed** on all calls (page 33). The time set for call acceptance therefore does not indicate how long the phone rings before the answer machine accepts the call.

Setting the recording time

You can set the maximum recording time of a message. The options are: **1, 2, 3 mins** or **Maximum**.

 →  → **Voice Mail** → **Message Length**

 Select recording time.

Save Press the display key.

Setting the recording quality

Set the quality you require for your recordings. The options are: **Standard, High, Excellent**. If the quality is higher, the maximum recording time is reduced.

 →  → **Voice Mail** → **Record Quality**

 Select the recording quality.

Save Press the display key.

Changing the language for voice prompt and pre-recorded announcement

  **8**  **5**  **9**  **2** 

Enter digits **and**

 **1** **OK** Set English.

 **2** **OK** Set French.

 **3** **OK** Set Arabian.

Resetting fast access for the answer machine using key 1

By default, key  has been assigned for fast access to the integrated answer machine. However, if you have set the network mailbox for fast access (page 41), you can reset this setting.

 →  → **Voice Mail** → **Set Key 1**

Answer Machine / Network Mailb.
Select and press **OK**.

 Press and **hold** (idle status).

After you have selected the network mailbox or the answer machine, press and **hold** key . You will be connected directly.

The setting for fast access applies to all Gigaset S67H handsets.

Operating when on the move (remote control)

You can check and activate your answer machine from any other telephone (hotel, pay phone etc.), or initiate ringback from the answer machine with an SMS.

Preconditions:

- ◆ You have set a system PIN other than 0000 (page 54).
- ◆ The phone you are using for remote operation has touch tone dialling (DTMF), i.e. you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer).

Calling the answer machine and playing back messages



Dial your own number.



When you hear your announcement, press  and enter the system PIN.

You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answer machine with the keypad.

The following keys are used for operation:

-  Go to the start of the previous message.
-  Stop playback. Press again to resume.
-  Go to the next message.
-  Mark message as "new".
-  Delete current message.

Activating the answer machine

- ▶ Phone home and let the phone ring until you hear: "Please enter PIN".



Enter system PIN.

Your answer machine is activated.

The messages are now played back.

The answer machine cannot be deactivated remotely.

Initiating ringback from the answer machine with SMS and listening to messages

Precondition: You must have stored a notification number (see page 31).

You can use the telephone (mobile phone or any other device with SMS functionality) for which you have stored the notification number in your phone to send an SMS to your answer machine when you are away from home. It will then call you back. The message playback begins when you accept the call and press any key.

The SMS must contain the following:

<System PIN><Ringback number>*

The ringback number is optional.

Examples:

4711 or *4711*089123456*

If a ringback number is entered, it is dialled; otherwise the notification number is dialled.

You can now operate the answer machine via the keypad, as described in the previous sections.

Using the network mailbox

The network mailbox is your network provider's answer machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

Configuring fast access for the network mailbox

With fast access, you can dial the network mailbox or the integrated answer machine (Gigaset S675 only) directly.

Gigaset S670: Fast access is set for the network mailbox. You only need to enter the number of the network mailbox.

Gigaset S675: The integrated answer machine is set for fast access. Instead of using this, you can specify the network mailbox. Ask your network provider about this.

Configuring fast access for the network mailbox and entering the network mailbox number

 →  → Voice Mail → Set Key 1

Network Mailb.

Select and press **OK** ( = on).



Enter the number for the network mailbox.

Save

Press the display key.



Press and **hold** (idle status).

The setting for fast access applies to all Gigaset S67H handsets.

Calling the network mailbox



Press and **hold**. You are connected straight to the network mailbox.



Press handsfree key () if required. You will hear the network mailbox announcement.

Viewing the network mailbox report

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed calls list and the message key flashes (page 23).

Using several handsets

Registering handsets

You can register up to six handsets to your base station.

A Gigaset S67H handset can be registered to up to four base stations.

Automatic registration of Gigaset S67H to Gigaset S670/S675

Precondition: The handset must not already be registered to a base station.

Registering the handset to the base station occurs automatically.

- ▶ Place the handset in the base station with its display facing forward.

Registration can take up to 5 minutes. During this process, the registration procedure appears in the display and the name of the base station flashes, e.g. base station 1. When the handset has registered successfully, its screen displays its internal number, e.g. INT 2 for internal number 2. The handset is assigned the lowest available internal number (1–6). If all internal numbers 1–6 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status.

Please note:

- Automatic registration is not possible when the base station to which you wish to register the handset is being used to make a call.
- Each key press interrupts the automatic registration.
- If automatic registration does not work, you will have to register the handset manually.
- You can change the name of the handset (see page 45).

Manual registration of Gigaset S67H to Gigaset S670/S675

You must activate manual registration of the handset on both the handset and the base station.

Once it has been registered, the handset returns to idle status. The handset's internal number is shown in the display e.g. INT 1. If not, repeat the procedure.

On the handset



→ → Handset → Register H/Set



Select base station, e.g. Base 1 and press **OK**.



Enter the system PIN of the base station (the default is 0000) and press **OK**. You will see flashing on the display e.g. Base 1.

On the base station

Within 60 sec. press and **hold** the registration/paging key on the base station (page 2) (approx. 3 sec.).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

On the handset

- ▶ Start to register the handset as described in its user guide.

On the base station

Press and **hold** the registration/paging key on the base station (page 2) (approx. 3 sec.).

Deregistering handsets

You can deregister any other registered handset from any registered Gigaset S67H handset.

 Open list of internal parties. The handset you are currently using is indicated by < .

 Select the internal party you wish to deregister.

Options Open menu.

De-reg. H/Set No. Select and press **OK**.

 Enter the current system PIN and press **OK**.

Yes Press the display key.

Locating a handset ("paging")

You can locate your handset using the base station.

- ▶ **Briefly** press the registration/paging key on the base station (page 2).
- ▶ All handsets will ring simultaneously ("paging"), even if the ringer tones are switched off.

Ending paging

- ▶ **Briefly** press the registration/paging key on the base station or press the talk key  on the handset.

Changing the base station

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (**Best Base**).

 →  → **Handset** → **Select Base**

 Select one of the registered base stations or **Best Base** and press **OK**.

Making internal calls

Internal calls to other handsets registered on the same base station are free.

Calling a specific handset

 Initiate internal call.

 Enter the number of the handset.

Or:

 Initiate internal call.

 Select handset.

 Press the talk key.

Calling all handsets ("group call")

 Initiate internal call.

 Press the star key. All handsets are called.

Ending a call

 Press the end call key.

Transferring a call to another handset

You can transfer an external call to another handset (connect).

 Open list of handsets. The external participant hears hold music if activated (see page 55).

 Select a handset or **Call All** and press **OK**.

When the internal participant answers:

- ▶ If necessary announce the external call.

 Press the end call key.

The external call is transferred to the other handset.

If the internal participant does **not** answer or the line is busy, press the display key **End**, to return to the external call.

When transferring a call you can also press the end call key  before the internal participant answers.

Using several handsets

Then, if the internal participant does not answer or the line is busy, the call will automatically return to you (the display will show **Recall**).

Internal consultation calls

When you are speaking to an **external** participant you can call an **internal** participant at the same time for consultation.

 Open list of handsets.
The external participant hears hold music if activated (see page 55).

 Select handset and press **OK**.

Ending a consultation call

End Press the display key.

You are reconnected with the external participant.

Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). The caller's number or name will appear in the display if Calling Line Identification is enabled.

Ending an internal call, accepting an external call

Accept Press the display key.

The internal call is **ended**. You are connected to the external caller.

Rejecting the external call

Reject Press the display key.

The call waiting tone is turned off. You remain connected with the internal participant. The ringer tone can still be heard on other registered handsets.

Listening in to an external call

Precondition: The **Listening In** function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of the "listening in" by a signal tone.

Activating/deactivating internal listening-in

 →  → **Base** → **Add. Features**
→ **Listening In**

Press **OK** to activate/deactivate the function ( = on).

 Press and **hold** (idle status).

Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the external call.

 Press and **hold** the talk key.

You are linked into the call. All participants hear a signal tone. During this time, this handset displays the **Conference** message and it is not possible to dial another number from this handset.

Ending listening in

 Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key () , the handset that has "listened in" remains connected to the external participant.

Changing the name of a handset

The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.

-  Open list of handsets. Your own handset is indicated by <.
-  Select handset.
-  Press the display key.
-  Enter name.
-  Press the display key.

Changing a handset's internal number

A handset is **automatically** assigned the lowest free number on registration. If all slots are occupied, number 6 is overwritten if this handset is in idle status. You can change the internal number of all registered handsets (1–6).

-  Open list of handsets. Your own handset is indicated by <.
-  **Options** Open menu.
-  **Edit H/Set No.** Select and press **OK**. The list of handsets is displayed.
-  The current number flashes. Select a handset.
-  Enter the new internal number (1–6). The handset's old number is overwritten.
-  **Save** Press the display key to save the input.
-  Press and **hold** (idle status).

You will hear the error tone (descending tone sequence) if you assign an internal number twice.

- ▶ Repeat the procedure with a free number.

Using a handset as a room monitor

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringer tone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

The room monitor mode is retained if you turn the handset off and on again.

Caution!

- You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.
- When the function is activated the handset's operating time is severely reduced. If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answer machine.

Handset settings

Activating the room monitor and entering the destination number

 →  → Room Monitor

- ▶ Change multiple line input:

Room M.:

Select **On** to activate.

Call to:

External number: Select the number from the directory (press display key ) or enter it directly. Only the **last 4 digits** are displayed.

Internal number: **Options** → INT → **OK** →  (select handset or **Call All**, if all registered handsets are to be called) → **OK**.

Level:

Set noise level sensitivity (**Low** or **High**).

- ▶ Press **Save** to save the settings.

Changing set destination numbers

 →  → Room Monitor

 Scroll to the **Call to:** line.

<C or **Delete**

Delete existing number.

- ▶ Enter number as described in "Activating the room monitor and entering the destination number" (page 46).

Deactivating the room monitor remotely

Preconditions: The phone must support touch tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys  .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ringer tone) on the handset will remain activated until you press the display key **OFF** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (page 46).

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Shortcuts for functions and numbers

You can assign the left display key and each of the digit keys  and  to  a number or a function. The right-hand display key has already been assigned a function. You can change the assignment.

The number is then dialled or the function started by simply pressing a key.

Assigning a digit key/left display key

Precondition: The digit key or the left display key has not yet been assigned a number or a function.

- ▶ Press the display key  or press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

Quick Dial / Call-by-Call

Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

- ▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/ display key.

Room Monitor

Assign key to the menu for setting and activating the room monitor (see page 45).

Alarm Clock

Assign key to the menu for setting and activating the alarm clock (see page 52).

Calendar

Open calendar/enter new appointment.

More Features...

More functions are available:

INT

Internal calls (see page 43).

SMS

Assign the menu for SMS functions to a key (see page 27).

SMS Notific.

Assign key with the menu for activating SMS notification (page 31).

If the left display key has been assigned a shortcut, the selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line via the display key.

Starting the function, dialling the number

If the handset is in idle status, press and **hold** the digit key or press the display key **briefly**.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ The function menu is opened.

Changing key assignments

Display key

- ▶ Press and **hold** the left or right display key.

The list of possible key assignments is opened.

- ▶ Proceed as is described when first assigning the key with a shortcut (page 46).

Digit key

- ▶ Press the digit key **briefly**.

Change Press the display key. The list of possible key assignments is displayed.

- ▶ Proceed as is described when first assigning the key with a shortcut (page 46).

Changing the display language

You can view the display texts in different languages.

 →  → **Handset** → **Language**

The current language is indicated by .

 Select a language and press **OK**.

 Press and **hold** (idle status).

If you accidentally choose a language you do not understand:

Press keys in sequence.

 Select the correct language and press **OK**.

Setting the display

You have a choice of four colour schemes and several different contrasts.

 →  → **Display**

Colour Scheme

Select and press **OK**.

 Select a colour scheme and press **OK** ( = current colour).

 Press **briefly**.

Contrast Select and press **OK**.

 Select contrast.

Save Press the display key.

 Press and **hold** (idle status).

Setting the screensaver

You can set a picture from the Resource Dir. (page 50) to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the **Screen Saver** menu option is marked with .

 →  → **Display** → **Screen Saver**

The current setting is displayed.

▶ Change multiple line input:

Activation:

Select **On** (screensaver is displayed) or **Off** (no screensaver).

Selection:

If required, change the screensaver (see below).

▶ Save changes: (page 63).

If the screensaver conceals the display, briefly press  to show the idle display with time and date.

Changing the screensaver

 →  → **Display** → **Screen Saver**

 Scroll to the **Selection** line.

View Press the display key. The active screensaver is displayed.

 Select screensaver and press **Change**.

▶ Save changes: (page 63).

Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If the base station is turned on, the display is permanently dimmed.

 →  → **Display** → **Backlight**

The current setting is displayed.

▶ Change multiple line input:

In Charger

Select **On** or **Off**.

Without Charger

Select **On** or **Off**.

Please note:

With the **On** setting, the standby time of the handset can be significantly reduced.

Save

Press the display key.



Press and **hold** (idle status).

Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .

 →  → **Handset**

Auto Answer

Select and press **OK** (= on).



Press and **hold** (idle status).

Changing the handsfree/earpiece volume

You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels.

In idle status:



→ **Handset Volume**



Set the earpiece volume.



Scroll to the **Speaker**: line.



Set the handsfree volume.



Press display key if necessary to save the setting permanently.

Setting the volume during a call:



Press the control key.



Select volume.



Press display key if necessary to save the setting permanently.

The setting will automatically be saved after approx. 3 seconds, if not then press the display key **Save**.

If  is assigned to another function:



Open menu.

Volume

Select and press **OK**.

Configure setting (see above).

Please note:

You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 15).

Changing ringer tones

◆ **Volume:**

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "crescendo" ring (6; volume increases with each ring = ).

◆ **Ringer tones:**

You can select various ringer tones, melodies or any sound from My stuff (page 50).

You can set different ringer tones for the following functions:

- ◆ **Ext. Calls:** for external calls
- ◆ **Internal Calls:** for internal calls
- ◆ **Appointments:** for set appointments (page 52)
- ◆ **All:** the same ringer tone for all functions

Settings for individual functions

Set the volume and melody depending on the type of signalling required.

In idle status:



→ **Ringer Settings**



Select setting, e.g. **Ext. Calls** and press **OK**.



Set volume (1–6).



Scroll to the next line.



Select melody.



Press the display key to save the setting.

Same settings for all functions

In idle status:

 → **Ringer Settings** → **All**

▶ Set volume and ringer tone (see "Settings for individual functions").

Save Press the display key to confirm the prompt.

 Press and **hold** (idle status).

Please note:

You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 15).

Activating/deactivating the ringer tone

You can deactivate the ringer tone on your handset before you answer a call or when the handset is in idle status; the ringer tone can be deactivated permanently or just for the current call. The ringer tone cannot be re-activated while an external call is in progress.

Deactivating the ringer tone permanently

 Press and **hold** the star key.

The  icon appears in the display.

Re-activating the ringer tone

 Press and **hold** the star key.

Deactivating the ringer tone for the current call

Silence Press the display key.

Activating/deactivating the alert tone

In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringer tone.

 Press and **hold** the star key and **within 3 seconds**:

Beep Press the display key. A call will now be signalled by **one** short alert tone. You will now see  in the display.

My stuff

My stuff on the handset manages sounds, which you can use as ringer tones, and pictures (CLIP pictures and screensavers), which you can use as caller pictures or as screensavers. Precondition: Calling line identification (CLIP). My stuff can manage the following media types:

| Icon | Sound | Format |
|---|-------------------------------------|-------------------------------------|
|  | Ringer tones | Standard |
|  | Monophonic | Standard |
|  | Polyphonic | .mid |
|  | Picture (CLIP picture, screensaver) | BMP (128 x 100 or 128 x 160 pixels) |

The icon is displayed in front of the name in My stuff. Various mono- and polyphonic sounds and pictures are preconfigured on your handset.

You can listen to the available sounds and view the pictures.

The pre-configured pictures are labelled with . You cannot rename or delete them.

Playing back sounds/viewing CLIP pictures

 →  → **Screensavers / Caller Pictures / Sounds** (select entry)

Play / View Press the display key. Sounds are played back or pictures are displayed. Press the  key to switch between entries.

End /  Press the display key. Playback of the sound or display of the picture ends.

While you are playing back sounds, you can also interrupt playback with the  key.

 Press and **hold** (idle status).

If you have saved a picture in an invalid data format, you will see an error message after selecting the entry. Cancel the operation with . Use **Delete** to delete the picture.

Sounds: setting the volume

During playback:

Volume  Press the display key.



Set volume.

Save  Press the display key.

Renaming/deleting a picture

You have selected an entry.

Options  Open menu.

If a picture cannot be deleted () , these options are not available. Depending on the situation, you can select the following functions:

Delete Entry

The selected entry is deleted.

Delete List

All entries in the list that can be deleted are deleted.

Rename

Change the name (max. 16 characters) and press **Save**. The entry is saved with the new name.

Activating/deactivating advisory tones

Your handset uses "advisory tones" to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

◆ **Key click:** Every key press is confirmed.

◆ **Acknowledge tones:**

- **Confirmation tone** (ascending tone sequence): at the end of an entry/ setting and when an SMS or a new entry arrives in the answer machine list or call history
- **Error tone** (descending tone sequence): when you make an incorrect entry
- **Menu end tone:** when scrolling at the end of a menu

◆ **Battery tone:** The batteries need to be charged.

In idle status:

 → **Advisory Tones**

▶ Change multiple line input:

Key Tones:

Select **On** or **Off**.

Confirm.:

Select **On** or **Off**.

Battery:

Select **On**, **Off** or **In Call**. The battery warning tone is only activated/deactivated and only sounds during a call.

▶ Save changes: (page 63).

You cannot deactivate the confirmation tone for placing the handset in the base station.

Please note:

You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 15).

Setting the alarm clock

Precondition: The date and time have already been set (page 10).

Activating/deactivating the alarm clock and setting the wake-up time



► Change multiple line input:

Activation:

Select **On** or **Off**.

Time:

Enter the wake-up time in 4-digit format.

Occurance:

Select **Daily** or **Monday-Friday**.

Volume:

Set the volume (1–6).

Melody:

Select melody.

► Save changes: (page 63).

The  icon is shown in the display.

A wake-up call with selected ringer tone (page 49) is signalled on the handset. The wake-up call sounds for 60 seconds.

 is shown in the display. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then turned off.

During a call, the wake-up call is signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (snooze mode)

Precondition: A wake-up call is sounding.

OFF Press the display key. The wake-up call is deactivated.

or

Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Setting an appointment (calendar)

You can have your handset remind you of up to 30 appointments (volume and melody, see page 49).

Saving an appointment

Precondition: The date and time have already been set (page 10).



Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are highlighted in black.)

The list of saved appointments for the day is displayed. If you have already saved 30 appointments, you must first delete an existing appointment.

<New Entry>

Select and press **OK**.

► Change multiple line input:

Appoint.:

Select **On** or **Off**.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digits format.

Notes:

Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

Save Press the display key.



Press and **hold** (idle status).

The appointment is marked with  in the appointments list. The list of appointments is sorted by date.

An appointment reminder is signalled with the selected ringer tone (page 49). The appointment reminder sounds for 60 seconds. The entered text, date and time are displayed.

During a call, the appointment reminder is signalled by a short tone.

Managing appointments



Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are highlighted in black in the calendar.)



Select appointment for the day.

Options

Open menu
Back with

You have the following options:

View Entry

View selected appointment, open the **Options** menu for editing, deleting and activating/ deactivating.

Edit Entry

Edit selected appointment.

Delete Entry

Delete selected appointment.

Activate / Deactivate

Activate/deactivate the selected appointment.

Delete List

Delete **all** appointments.

Deactivating or accepting an appointment reminder

Precondition: An appointment reminder is sounding.

OFF

Press the display key to deactivate the appointment reminder.

Or:

SMS

Press display key to accept the appointment reminder with an SMS.

Displaying missed appointments and anniversaries

Missed appointments/anniversaries (page 21) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/ anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic redial was activated at the time of an appointment/anniversary (page 22).

The most recent entry is at the head of the list.

If there is a new appointment/anniversary in the list, the display shows **Appoint.** Pressing the display key will also open the **Missed Alarms** list.

To open the list from the menu:

→ **Missed Alarms**

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

Delete

Delete appointment

SMS

Write an SMS.



Press and **hold** (idle status).

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Setting your own area code

In order to transfer phone numbers (for example vCard), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already pre-set.

→ → **Handset** → **Area Codes**

Check that the (pre)set area code is correct.

▶ Change multiple line input:

Select/change input field.


Navigate in the input field.

If necessary, delete number: press the display key.

Enter number.

Press the display key.

Example:

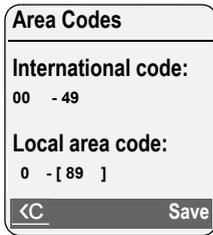

Restoring the handset to the factory settings

You can reset any individual settings and changes that you have made. Entries in the directory, the call-by-call list, the call history, the SMS lists and the handset's registration to the base station as well as the content of My stuff are retained.

→ → **Handset** → **Reset Handset**

Press the display key.

Press and **hold** (idle status).

Base station settings

The base station settings are carried out using a registered Gigaset S67H handset.

Protecting against unauthorised access

Protect the system settings of the base station with a PIN known only by you. The system PIN must be entered when, for example, registering/deregistering a handset to/from the base station or when restoring the default settings.

Changing the system PIN

You can change the 4-digit system PIN set on the base station (default setting: 0000) to a 4-digit PIN known only by you.

Gigaset S675: Setting a system PIN facilitates remote operation of the answer machine (page 40).

→ → **Base** → **System PIN**

Enter the current system PIN and press **OK**.

Enter new system PIN. For security the PIN is shown as four stars (****).

Jump to the next line, re-enter new system PIN and press **OK**.

Press and **hold** (idle status).

Resetting the system PIN

If you have forgotten your system PIN you can reset the base station to the original code **0000**:

Disconnect the power cord from the base station. Hold down the registration/paging key on the base station while reconnecting the power cable to the base station. Release the key after a while.

The base has now been reset and the system PIN **0000** set.

Please note:

All handsets are deregistered and must be re-registered.

Changing ringer tones (Gigaset S675 only)

◆ Volume:

You can choose between five volumes and the "crescendo" ring, see page 49. Select "0" to deactivate the base station ringer tone.

◆ Ringer tones:

You can set a ringer tone melody for external calls, see page 49.

 →  → **Base** → **Ringer Settings**

For how to adjust the settings, see page 49.

Activating/deactivating music on hold

 →  → **Base** → **Music on hold**

Press **OK** to activate or deactivate music on hold ( = on).

Repeater support

With a repeater you can increase the range and reception strength of your base station. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

Precondition: A repeater is registered. Eco mode is disabled.

 →  → **Base** → **Add. Features**
→ **Repeater Mode**

Yes Press the display key.

When repeater mode is active, the menu item is marked with .

Please note:

Repeater support and eco mode (see page 13) rule each other out, i.e. both functions cannot be used at the same time.

Restoring the base station to the factory settings

When the settings are restored

- ◆ eco mode is disabled,
- ◆ handsets are still registered,
- ◆ the system PIN is not reset.

 →  → **Base** → **Base Reset**

 Enter the system PIN and press **OK**.

Yes Press the display key.

Cancel the restoring process by pressing

 or the display key **No**.

 Press and **hold** (idle status)

Connecting the base station to PABX

The following settings are only necessary when your PABX requires them; see the PABX user guide.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

Dialling modes and recall

The current setting is indicated by .

Changing the dialling mode

The following dialling modes can be selected:

- ◆ Touch tone dialling (DTMF)
- ◆ Pulse dialling (DP)

 →  → **Base** → **Add. Features**
→ **Dialling Mode**

 Select dialling mode (= on) and press **OK**.

 Press and **hold** (idle status).

Setting recall

 →  → **Base** → **Add. Features**
→ **Recall**

 Select flashing time (= on) and press **OK**.

 Press and **hold** (idle status).

Saving an access code (outside line code)

Precondition: You may have to enter an access code for external calls in your PABX, e.g. "0".

 →  → **Base** → **Add. Features**
→ **Access Code**

 Enter or change access code, max. 3 digits.

▶ Save changes: (page 63).

If an access code has been saved,

- ◆ The access code is prefixed automatically when you select from the following lists: numbers of the SMS centres, call history or answer machine list.
- ◆ The access code must be entered when dialling manually and when manually entering directory, emergency/quick dial numbers and SMS centre numbers.
- ◆ If you copy the recipient's number from the directory when sending an SMS, you have to delete the access code.
- ◆ An existing access code is deleted using **KC**.

Setting pauses

Changing pause after line seizure

You can change the length of pause that is inserted between pressing the talk key  and sending the number.



Open menu.



Press keys.



Enter digit for the pause length (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec.) and press **OK**.

Changing the pause after the recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).



Open menu.



Press keys.



Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.

Changing a dialling pause (pause after access code)

Precondition: You have saved an access code (page 56).



Open menu.



Press keys.



Enter a digit for the length of the pause (1 = 1 sec.; 2 = 2 sec.; 3 = 3 sec.; 4 = 6 sec.) and press **OK**.

To insert a dialling pause: press  for 2 seconds. A P appears in the display.

Switching temporarily to touch tone dialling (DTMF)

If your PABX still operates with pulse dialling (DP), but you need touch tone dialling (DTMF) for a connection (e.g. to listen to the network mailbox) you must switch to touch tone dialling for the call.

Precondition: You are conducting a call or have already dialled an external number.



Press the star key.

After the call is ended, pulse dialling is automatically activated again.

Appendix

Care

- ▶ Wipe the base station, charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause a build up of static.

Contact with liquid

If the handset has come into contact with liquid:

1. **Turn off the handset and remove the batteries immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not turn on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Questions and answers

If you have any questions about using your phone, visit us at www.siemens.com/gigasetcustomercare at any time. The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not turned on.
 - ▶ Press **and hold** the end call key .
2. The battery is almost flat.
 - ▶ Charge or replace the batteries (page 8).

The keys of a handset do not respond when pressed.

The keypad lock is activated.

- ▶ Press and **hold** the hash key  (page 11).

"Base station x" flashes on the display.

1. The handset is outside the range of the base station.
 - ▶ Move the handset closer to the base station.
2. The base station's range is reduced because eco mode is activated.
 - ▶ Deactivate eco mode (page 13) or reduce the distance between the handset and the base station.
3. The handset has been deregistered.
 - ▶ Register the handset (page 42).
4. The base station is not turned on.
 - ▶ Check the base station's mains adapter (page 8).

Base Search flashes in the display.

The handset is set to **Best Base** and no base station is turned on or within range.

- ▶ Move the handset closer to the base station.
- ▶ Check the base station's mains adapter (page 8).

Handset does not ring.

1. The ringer tone is deactivated.
 - ▶ Activate the ringer tone (page 50).
2. Call diversion set to **All Calls**.
 - ▶ Deactivate call diversion.

You cannot hear a ringer/dialling tone from the fixed network.

The phone cord supplied has not been used or has been replaced by a new cord with the wrong jack connections.

- ▶ Please always use the phone cord supplied or ensure that the jack connections are correct when purchasing from a retailer (page 8).

Error tone sounds after system PIN prompt.

You have entered the wrong system PIN.

- ▶ Reset the system PIN to 0000 (page 54).

Forgetting the system PIN.

- ▶ Reset the system PIN to 0000 (page 54).

Call charges are not displayed.

1. Your network provider does not support this feature.
2. There are no metering pulses.
 - ▶ Ask your network provider to transmit the metering pulses.

The other party cannot hear you.

You have pressed the  (INT) key. The handset is "muted".

- ▶ Activate the microphone again (page 17).

The number of the caller is not displayed despite CLIP.

Calling Line Identification is not enabled.

- ▶ **The caller** should ask the network provider to release Calling Line Identification (CLI).

You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.

- ▶ Repeat the operation.
Watch the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your phone system is set for pulse dialling.

- ▶ Set your phone system to touch tone dialling.

Gigaset S675 only:**No time is specified for a message in the call history.**

Date/time is not set.

- ▶ Set the date/time (page 10).

The answer machine reports "PIN is incorrect" to the remote control.

1. You have entered the wrong PIN
 - ▶ Enter the system PIN again
2. The system PIN is still set to 0000.
 - ▶ Change the system PIN (page 54).

The answer machine is not recording any messages/has switched over to announcement.

Its memory is full.

- ▶ Delete old messages.
- ▶ Play back new messages and delete.

Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

<http://www.siemens.com/gigasetcustomercare>

This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the **Questions and Answers** section of this user guide in the appendix.

If the device needs to be repaired, please contact one of our Customer Care Centers:

| | | | |
|---|-----------------------------|---------------------------|-------------------------------|
| Abu Dhabi..... | 97 12 62 23 800 | Malaysia..... | 603 77124304 |
| Argentina..... | 0800-888-9878 | Malta..... | +353 21 4940 632 |
| Australia..... | 1300 665 366 | Mexico..... | 01 80 07 11 00 03 |
| Austria .05 17 07 50 04 (0,065 Euro/Min.) | | Netherlands | |
| Bahrain..... | 97 31 73 11 173 | | 0900-3333102 (0,25 Euro/min.) |
| Belgium..... | 0 78 15 66 79 | New Zealand..... | 08 00 27 43 63 |
| Bosnia Herzegovina..... | 033 276 649 | Norway..... | 22 70 84 00 |
| Brazil..... | | Oman..... | 96 82 47 09 281 |
| Grande Capitais e Regiões Metropolitanas: | | Poland..... | 0 801 140 160 |
| | 4003 3020 | Portugal..... | 808781223 |
| | (US\$ 0,59) | Romania..... | 02 12 04 60 00 |
| Demais localidades:..... | 0800 707 1248 | Russia..... | 8 (495) 228 1312 |
| | (US\$ 0,59) | Serbia..... | 01 13 07 00 80 |
| Bulgaria..... | 02 873 94 88 | Singapore..... | 62 27 11 18 |
| Canada..... | 701-355-3984 | Slovak Republic | |
| China..... | 0 21 400 670 6007 | | 02 59 68 22 66 |
| Croatia..... | 016 10 53 81 (0,23 Kun) | Slovenija..... | 0 14 74 63 36 (6,30 Tolar) |
| Czech Republic..... | 233 032 727 | South Africa..... | 08 60 10 11 57 |
| Denmark..... | 35 25 86 00 | Spain..... | 902 103935 |
| Dubai..... | 97 14 39 69 944 | Sweden..... | 08 750 99 11 |
| Egypt..... | 202 7623441 | Switzerland | |
| Finland..... | 09 23 11 34 25 | | 0848 212 000 (0,08 SFr./Min.) |
| France..... | 01 56 38 42 00 | Taiwan..... | 02 23 96 10 06 |
| Germany.01805 333 222 (0,14 Euro/Min.) | | Thailand..... | 02 722 1118 |
| Greece..... | 801 11 11 11 6 (0,026 Euro) | Turkey..... | 0 21 64 59 98 59 |
| Hungary..... | 06 14 71 24 44 (27 Ft) | Ukraine..... | +380-44-451-71-72 |
| Ireland..... | 18 50 77 72 77 | United Arab Emirates..... | 0 43 66 03 86 |
| Italy..... | 199 15 11 15 | United Kingdom..... | 0 84 53 67 08 12 |
| Kuwait..... | 96 52 44 4200 | USA..... | 1-866 247-8758 |
| Latvia..... | 7 50 11 18 | | (toll free) |
| Luxembourg..... | 40 66 61 56 40 | | |

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Authorisation

This device is intended for connection to analogue networks outside the EEA (with the exception of Switzerland) depending on national type approval.

Country-specific requirements have been taken into consideration.

We, Siemens Home and Office Communication Devices GmbH & Co. KG, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/CE.

CE 0682

Specifications

Recommended batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 600 – 1200 mAh

We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ Sanyo NiMH 800
- ◆ GP 850 mAh
- ◆ Yuasa Technologies AAA 800

The device is supplied with two recommended batteries.

Handset operating times/charging times

The operating time of your Gigaset depends on the age of the batteries and the way they are used. (All times are maximum possible times and apply only when the display backlight is deactivated.)

| | Capacity (mAh) approx. | | | |
|---|------------------------|-----|------|------|
| | 600 | 800 | 1000 | 1200 |
| Standby time (hours) | 130 | 180 | 220 | 265 |
| Talktime (hours) | 7 | 10 | 12 | 14 |
| Operating time for 1.5 hour call each day (hours) | 70 | 90 | 115 | 135 |
| Charging time, charging cradle (hours) | 6 | 9 | 11 | 13 |
| Charging time, base station (hours) | 5 | 7 | 8 | 10 |

At the time of going to print, batteries up to 900 mAh were available and had been tested in the system. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

www.siemens.com/gigasetcustomercare

Base station power consumption

In standby mode: Gigaset S670: approx.

1.2 watt Gigaset S675: approx. 1.6 watt

During a call: Gigaset S670: approx. 1

watt Gigaset S675: approx. 1.5 watt

General specifications

| | |
|---------------------------------------|---|
| DECT standard | is supported |
| GAP standard | is supported |
| No. of channels | 60 duplex channels |
| Radio frequency range | 1880–1900 MHz |
| Duplex method | Time multiplex, 10 ms frame length |
| Channel grid | 1728 kHz |
| Bit rate | 1152 kbit/s |
| Modulation | GFSK |
| Language code | 32 kbit/s |
| Transmission power | 10 mW, average power per channel |
| Range | up to 300 m outdoors, up to 50 m indoors |
| Base station power supply | 230 V ~/50 Hz |
| Environmental conditions in operation | +5 °C to +45 °C; 20% to 75% humidity |
| Dialling mode | DTMF (touch tone dialling)/ DP (pulse dialling) |

Notes on the user guide

This section explains the meaning of certain typographical conventions that are used in this user guide.

Example of a menu input

The steps you need to perform are shown in abbreviated form in the user guide. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes.

 →  → **Display**

- ▶ With the handset in idle status, press on the **right** of the control key () to open the main menu.
- ▶ With the / control key, select the  icon.

Settings appears in the display header.

- ▶ Press the display key **OK** to confirm the **Settings** function.

The **Settings** submenu is displayed.

- ▶ Press on the bottom of control key  repeatedly until the **Display** menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

Contrast Select and press **OK**.

- ▶ Press on the bottom of control key  repeatedly until the **Contrast** menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

 Select contrast and press the display key **Save**.

- ▶ Press on the right or left of the control key to set the contrast.
- ▶ Press the display key **Save** to confirm the selection.



Press and **hold** (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

Example of multiple line input

In many situations you can change settings or enter data in several lines of a display.

In this user guide icons are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes.

You will see the following display (example):

Date/Time

Date:
[15.11.2007]

Time:
11:11

↩ Save

Date:

Enter the day, month and year in 8-digit format.

The second line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

Time:

Enter hours/minutes in 4-digit format.

- ▶ Press the key.

The fourth line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

- ▶ Save the changes.

- ▶ Press the display key **Save**.
 - ▶ Then press and **hold** the key.
- The handset switches to idle status.

Writing and editing text

The following rules apply when writing a text:

- ◆ Control the cursor with .
- ◆ Characters are inserted on the left of the cursor.
- ◆ Press the star key to show the table of special characters. Select the required character, press the display key **Insert** to insert the character at the cursor position.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Writing an SMS/name (without predictive text)

Press the relevant key several times to enter letters/characters.

Standard characters

| | 1x | 2x | 3x | 4x | 5x | 6x | 7x | 8x | 9x | 10x |
|--|----|----|----|----|----|----|----|----|----|-----|
| | | | 1 | | | | | | | |
| | a | b | c | 2 | ä | á | à | â | ã | ç |
| | d | e | f | 3 | ë | é | è | ê | | |
| | g | h | i | 4 | ï | í | ì | î | | |
| | j | k | l | 5 | | | | | | |
| | m | n | o | 6 | ö | ñ | ó | ò | ô | õ |
| | p | q | r | s | 7 | ß | | | | |
| | t | u | v | 8 | ü | ú | ù | û | | |
| | w | x | y | z | 9 | ÿ | ý | æ | ø | å |
| | . | , | ? | ! | 0 | | | | | |

- 1) Space
- 2) Line break

Arabic

| | 1x | 2x | 3x | 4x | 5x | 6x | 7x | 8x | 9x | 10x | 11x | 12x |
|--------------|----|----|----|----|----|----|----|----|----|-----|-----|-----|
| 1 ٠٠٠ | ا | ب | ١ | | | | | | | | | |
| 2 ١٢٣٤٥٦ | ث | ج | ح | خ | 2 | a | b | c | | | | |
| 3 ٧٨٩١٠١١ | ا | ب | ة | ت | ا | ا | ا | 3 | d | e | f | |
| 4 ١٢٣٤٥٦٧ | ط | ظ | ع | غ | 4 | g | h | i | | | | |
| 5 ٨٩١٠١١١٢ | س | ش | ص | ض | 5 | j | k | l | | | | |
| 6 ١٢٣٤٥٦٧٨ | ذ | ذ | ر | ز | 6 | m | n | o | | | | |
| 7 ٩١٠١١١٢١٣ | ي | ى | ء | ئ | 7 | p | q | r | s | | | |
| 8 ١٤١٥١٦١٧١٨ | م | ن | ه | و | ٨ | t | u | v | | | | |
| 9 ١٩٢٠٢١٢٢٢٣ | ف | ق | ك | ل | 9 | w | x | y | z | | | |
| 0 + | . | , | ? | ! | 0 | | | | | | | |

- 1) Space
- 2) Line break

When you press and **hold** a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.

Setting upper/lower case or digits

Press the hash key **[#↔]** briefly to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key **[#↔]** before entering the letter.


You can see in the display whether upper case, lower case or digits is selected.

Writing SMS (with predictive text)

EATONI predictive text helps you when you are writing SMS messages.

Each key between **[0+]** and **[9 ١٢٣٤٥٦٧٨٩]** is assigned several letters and characters. These appear in a selection line immediately under the text panel (over the display keys) as soon as you press a key. The letter you are most likely looking for is shown in reversed highlights and is at the

beginning of the selection line. It is copied into the text panel.

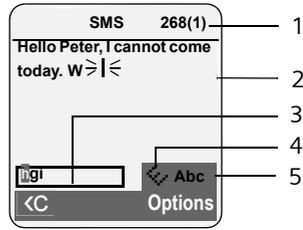

- 1 Remaining number of characters, in brackets: SMS part 1-n
- 2 SMS text
- 3 Selection line
- 4 EATONI is activated
- 5 Upper/lower case or digits

If this letter is the one you want, confirm it by pressing the next key. If it does not match the one you want, press the hash key **[#↔]** briefly until the letter you are looking for is reverse highlighted in the display line and then transferred to the text field.

If you press and **hold** the hash key  you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc".

Deactivating/activating predictive text

Precondition: You are writing an SMS.

Options Press the display key.

Predictive Text

Select and press **OK** ( = on).



Press the end call key **briefly** to return to the text field.
Enter the text.

Accessories

Gigaset Handsets

Upgrade your Gigaset to a cordless PABX:

Gigaset handset S67H

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

www.siemens.com/gigasetS67H



Gigaset Handset SL37H

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ PC interface, e.g. for managing directory entries, ringer tones and screensavers
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor
- ◆ Walky-talky function

www.siemens.com/gigasetSL37H



Gigaset Handset SL56

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Voice dialling
- ◆ PC interface, e.g. for managing directory entries, ringer tones and screensavers
- ◆ Headset socket
- ◆ Bluetooth

www.siemens.com/gigasetSL56

**Gigaset Handset S45**

- ◆ Illuminated colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 150 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

www.siemens.com/gigasetS45

**Gigaset Handset E45**

- ◆ Dust and splashproof casing
- ◆ Illuminated colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 150 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

www.siemens.com/gigasetE45



Accessories

Gigaset repeater

The Gigaset repeater can be used to increase the reception range of your Gigaset handset to the base station.

www.siemens.com/gigasetrepeater



Gigaset HC450 – door intercom for cordless phones

- ◆ Use the intercom from your cordless phone – no need for a fixed home phone
- ◆ Intuitive user functions using the softkeys (open door, switch on entry light)
- ◆ Simple to configure using the handset menu
- ◆ Divert to outside phone numbers (intercom feature)
- ◆ Simple to install and register with the Gigaset system
- ◆ Replaces existing call button – no further cable is needed
- ◆ Supports the existing doorbell and standard door opener
- ◆ Configuration options for the second ringer key (separate intercom call, activating interior lighting, or function such as first ringer key)

www.siemens.com/GigasetHC450




All accessories and batteries are available from your phone retailer.



Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.

Wall-mounting the base station

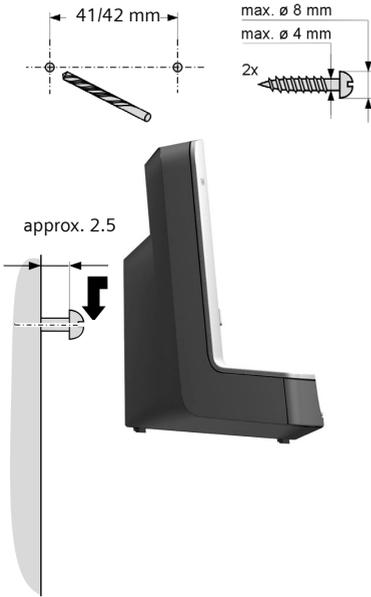

Index

A

Access code
 for a PABX 56

Access protection 54

Accessories 66

Acknowledge tones 51

Activating
 advisory tones 51
 answer machine 35
 answer machine
 (remote operation) 40
 appointment 52
 call acceptance 48
 handset 11
 internal listening in 44
 keypad lock 11
 muting ringer tone 33
 room monitor 46
 two-way recording 38

Advisory tones 51

Alarm clock 52

Alert tone 50

Anniversary 21
 deactivating 22
 missed 22, 53
 saving in directory 21

Announcement
 (answer machine) 36

Announcement mode
 (answer machine) 35, 36

Answer machine 35
 activating/deactivating 35
 deleting messages 37
 playing back messages 37
 recording a personal announcement/
 announce only 35
 remote operation 40
 scrolling back 37
 scrolling forward 37

Answer machine list 23, 24

Answer machine, see also
 Network mailbox

Appointment 52, 53

Appointment/anniversary
 display missed 53

Appointments
 activating/deactivating 53
 deleting 53
 managing 53

Area code
 setting own dialling code 54

Assigning a key 46

Assigning numerical keys 46

Authorisation 61

Automatic
 call acceptance 16, 48
 last number redial 23
 network provider preselection 25

B

Base station
 changing 43
 connecting 8
 connecting and installing 7
 connecting to PABX 56
 range 8
 restoring to factory settings 55
 setting 54
 system PIN 54

Battery
 charging 1, 10
 display 1, 10
 fitting 8
 icon 1, 10
 recommended batteries 61
 tone 51

Beep, see Advisory tones

Best base station 43

Birthday, see Anniversary

Bluetooth connection
 setting own area code 54

C

Calendar 52

Call
 accepting 16
 ending 16
 external 16
 internal 43
 party listening in 44
 picking up from answer machine 38
 transferring (connect) 43, 45
 two-way recording 38

Call acceptance 39, 48

- Call duration 16
- Call history 24
- Call screening during recording 38
- Call waiting
 - internal call 44
- Call-by-call 19
 - numbers 19, 25
- Call-by-call list
 - key 1
- Calling Line Identification 16
- Care of the telephone 58
- Changing
 - destination number 46
 - dialling mode 56
 - display language 47
 - earpiece volume 49
 - handsfree volume 49
 - internal number of a handset 45
 - name of a handset 45
 - pause time 57
 - ringer tone 49
 - system PIN 54
- Character set 29, 31
- Charge saving function (remote operation) 39
- Charge status display 1
- CLI, CLIP 16
- CLIP picture 16, 19, 50
- CNIP 16
- Configuring the network mailbox 41
- Confirmation tone 51
- Connecting, base station to PABX 56
- Consultation call (internal) 44
- Control key 1, 11
- Correcting incorrect entries 13
- Customer Care 60
- D**
- Deactivating
 - advisory tones 51
 - answer machine 35
 - appointment 52
 - appointment reminder 53
 - call acceptance 48
 - handset 11
 - internal listening in 44
 - keypad lock 11
 - muting ringer tone 33
 - preselection 26
 - room monitor 46
 - two-way recording 38
- Delete key 12
- Deleting
 - announcement for answer machine 36
 - characters 13
 - message 37
- Deregistering (handset) 43
- Destination number (room monitor) 46
- Dialling
 - call-by-call list 20
 - directory 20
 - mode 56
 - quick dial 46
 - with quick dial 21
- Dialling pause 57
 - entering 1
- Directory 19
 - copying number from text 21
 - managing entries 20
 - opening 11
 - order of entries 20
 - saving anniversary 21
 - saving entry 19
 - saving the sender's number (SMS) 31
 - sending entry/list to handset 21
 - using to enter numbers 21
- Display
 - backlight 48
 - changing display language 47
 - contrast 47
 - in idle status 12
 - memory (directory/call-by-call) 21
 - missed appointments/anniversaries 53
 - name (CNIP) 16
 - network mailbox report 41
 - number (CLI/CLIP) 16
 - screensaver 48
 - setting 47
 - wrong language 47
- Display keys 1, 12
 - assigning 46
- DP (pulse dialling) 56
- Draft message list (SMS) 28
- E**
- Earpiece mode 17
- Earpiece volume 49

Index

EATONI (predictive text) 64
Eco mode 13
E-mail address 29
 copying from the directory 21
End call key 1, 16
Ending, call 16
Ending, see deactivate
Entry
 saving, changing (preselection) 26
 selecting (menu) 62
 selecting from directory 20
Error tone 51
Example
 menu input 62
 multiple line input 63
External call
 diverting to answer machine 38

F

Fast access
 answer machine 39
 network mailbox 41
Fax (SMS) 29

G

Group call 43

H

Handset
 activating/deactivating 11
 advisory tones 51
 changing internal number 45
 changing name 45
 changing the number 45
 changing to a different base
 station 43
 changing to best reception 43
 contact with liquid 58
 deregistering 42, 43
 display backlight 48
 display language 47
 earpiece volume 49
 handsfree volume 49
 idle status 12
 list 11
 locating 43
 muting 17
 paging 43
 registering 42
 registering to a different base

 station 43
 restoring to factory settings 54
 screensaver 48
 setting 46
 setting up 8
 signal strength 8
 transferring a call 43
 using room monitor 45
 using several 42
Handset operating time
 in room monitor mode 45
Handsfree key 1
Handsfree talking 17
Hash key 1, 11
Headset socket 10
Hearing aids 5
Hold music 17, 55
 setting 55

I

Icon
 alarm clock 52
 answer machine 35
 battery 10
 display 12
 for new messages 23
 keypad lock 11
 new message 37
 new SMS 30
 ringer tone 50
Idle status (display) 12
Idle status, returning to 12
Incoming message list (SMS) 30
Incorrect input (correction) 13
Input language (SMS) 28
Installation, base station 7
Internal
 consulting 44
 listening in 44
 making calls 43
Internal call 43
 call waiting 44

K

Key 1 (fast access) 1, 39
Keypad lock 11
Keys
 call-by-call list 1
 control key 1, 11
 delete key 12

- display keys 1, 12
 - end call key 1, 16
 - fast access 1, 39
 - handsfree key 1
 - hash key 1, 11
 - message key 1
 - on/off key 1
 - quick dial 21
 - recall key 1
 - star key 1
 - talk key 1, 16
- L**
- Language, display 47
 - Last number redial 22
 - Linking, see SMS
 - Liquid 58
 - List 19
 - answer machine 23, 24
 - call history 24
 - call-by-call list 19
 - handsets 11
 - missed calls 24
 - network mailbox 24
 - SMS draft message list 28
 - SMS incoming message list 30
 - SMS list 24
 - Listening in to call 44
 - Locating, handset 43
 - Lock
 - activating/deactivating keypad protection 11
- M**
- Mailbox ID, see SMS
 - Mailboxes, see SMS
 - Mains adapter 5
 - Making calls
 - accepting a call 16
 - external 16
 - internal 43
 - Making cost-effective calls 25
 - Manual last number redial 22
 - Medical appliances 5
 - Memory
 - directory/call-by-call 21
 - Menu
 - end tone 51
 - menu guidance 12
 - menu input 62
 - opening 11
 - overview 14
 - Message key
 - open list 30
 - opening lists 23
 - Messages 35
 - deleting 37
 - key 1
 - marking as "new" 37
 - new message icon 37
 - playing back 37
 - Microphone 1
 - Missed
 - anniversary 53
 - appointment 53
 - calls 24
 - Multiple line input 63
 - Muting
 - first ring 33
 - handset 17
 - My stuff 50
- N**
- Name
 - displaying caller's name (CNIP) 16
 - of a handset 45
 - Network provider (numbers list) 19
 - Network provider preselection,
 - automatic 25
 - Network services 18
 - Notification by SMS 31
 - Number
 - as destination for room monitor 46
 - copying from an SMS text 31
 - copying from directory 21
 - copying to directory 21
 - displaying caller's number (CLIP) 16
 - entering with directory 21
 - saving in the directory 19
 - Numbers list
 - network provider 19
- O**
- On/Off key 1
 - Order in directory 20
 - Outside line code 56

| | |
|---------------------------------|--------|
| P | |
| PABX | |
| connecting base station | 56 |
| pauses | 57 |
| saving access code | 56 |
| setting dialling mode | 56 |
| setting recall | 56 |
| SMS | 33 |
| switch to touch tone dialling | 57 |
| Pack contents | 7 |
| Paging | 43 |
| Pause | 57 |
| Phone jack assignment | 8 |
| Picture | |
| deleting | 51 |
| renaming | 51 |
| Picture CLIP | 19, 50 |
| PIN change | |
| system PIN | 54 |
| Playing back | |
| announcement (answer machine) | 36 |
| message (answer machine) | 37 |
| Power consumption | 61 |
| Predictive text | 64 |
| Preselection | 25 |
| deactivating | 26 |
| Protecting the phone against | |
| access | 54 |
| Pulse dialling | 56 |
| Q | |
| Questions and answers | 58 |
| Quick dial | 19, 46 |
| R | |
| Range | 8 |
| Recall | 56 |
| Recall key | 1 |
| pause after | 57 |
| Reception booster, see Repeater | |
| Recording | |
| quality | 39 |
| time | 39 |
| two-way recording | 38 |
| Registering (handset) | 42 |
| Reminder call | 22 |
| Remote operation | 40 |
| Repeater | 55 |
| Ringer tone | |
| changing | 49 |
| muting | 33 |
| setting melody | 55 |
| setting volume | 49, 55 |
| Room monitor | 45 |
| S | |
| Saving (access code) | 56 |
| Screensaver | 48 |
| Searching in directory | 20 |
| Sending | |
| directory entry to handset | 21 |
| Sensitivity (room monitor) | 46 |
| Service | 60 |
| Setting | |
| date | 10 |
| melody | 55 |
| screensaver | 48 |
| time | 10 |
| Setting up | |
| handset | 8 |
| Shortcut | 14 |
| Signal strength | 8 |
| SMS | 27 |
| active send service centre | 27 |
| changing mailbox | 32 |
| deleting | 29 |
| draft message list | 28 |
| forwarding | 30 |
| incoming message list | 30 |
| input language | 28 |
| linked | 27 |
| mailbox ID | 32 |
| mailboxes | 32 |
| notification by SMS | 31 |
| notification number | 31 |
| notification type | 31 |
| PIN protection | 32 |
| reading | 29 |
| receiving | 30 |
| registration wizard | 27 |
| replying to and forwarding | 30 |
| rules | 27 |
| saving number | 31 |
| self help with error messages | 34 |
| sending as a fax | 29 |
| sending to a personal mailbox | 32 |
| sending to an e-mail address | 29 |

| | |
|------------------------------------|--------|
| status report | 28 |
| to a PABX | 33 |
| troubleshooting | 34 |
| writing | 27, 63 |
| SMS centre | |
| changing number | 33 |
| setting | 33 |
| SMS list | 24 |
| Snooze mode | 52 |
| Sound , see Ringer tone | |
| Special functions | 56 |
| Specifications | 61 |
| Star key | 1 |
| System settings | 54 |

T

| | |
|---------------------------------|--------|
| Talk key | 1, 16 |
| Text message, see SMS | |
| Touch tone dialling | 56, 57 |
| Troubleshooting | 58 |
| Troubleshooting (SMS) | 34 |

U

| | |
|--------------------------|----|
| Unknown | 17 |
| Unknown caller | 17 |

V

| | |
|--|--------|
| Viewing the network mailbox report | 41 |
| VIP (directory entry) | 20 |
| Volume | |
| earpiece | 49 |
| earpiece volume | 49 |
| handset handsfree volume | 49 |
| loudspeaker | 49 |
| ringer tone | 49, 55 |
| setting | 49 |

W

| | |
|----------------------------------|----|
| Warning tone, see Advisory tones | |
| Writing (SMS) | 27 |
| Writing, editing text | 63 |